

Audio Preset 1/2/3

Save and play Internet radio channels

1. Open *Windows Media Player*, then search to play your preferred radio channels with Windows media player program. To play Internet radio channels, press Audio preset 1~3 buttons for 3~4 seconds in order to save the radio channel into audio preset button.

Warning: Internet radio channels are only saved when you use Windows Media Player.

2. To activate the saved Internet radio channels, just simply press the audio preset buttons.

Messenger features

1. Messenger: If you have two or more messenger programs such as Windows messenger, MSN messenger, Skype, or ICQ on your PC, you can reprogram the Messenger button by clicking on the *ErgoMedia* icon on the bottom right hand side of your screen.
2. Status: Allows you to change to a different messenger status by clicking on the *ErgoMedia* icon on the bottom right hand side of your screen.
3. Webcam: Allows you to activate the webcam function for visual conference through Messenger's program.

Warning: Please make sure that your web cam device has been installed before using this function.