



K7VM2

# User Manual

Version 3.1

Published July 2003

Copyright©2003 ASRock INC. All rights reserved.

---

## Copyright Notice:

No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

## Disclaimer:

Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this manual.

With respect to the contents of this manual, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product.

**ASRock Website: <http://www.asrock.com>**

---

# Contents

<b>1</b>	<b>Introduction</b>	<b>4</b>
1.1	Package Contents	4
1.2	Specifications	5
1.3	Motherboard Layout	7
1.4	ASRock I/O™	8
<b>2</b>	<b>Installation</b>	<b>9</b>
2.1	Screw Holes	9
2.2	Pre-installation Precautions	9
2.3	CPU Installation	10
2.4	Installation of Heatsink and CPU fan	10
2.5	Installation of Memory Modules (DIMM)	11
2.6	Expansion Slots	11
2.7	Jumpers Setup	12
2.8	Connectors	15
<b>3</b>	<b>BIOS Setup</b>	<b>17</b>
3.1	BIOS Setup Utility	17
3.1.1	BIOS Menu Bar	17
3.1.2	Legend Bar	17
3.2	Main Menu	18
3.3	Advanced, Security, Power, Boot, and Exit Menus	20
<b>4</b>	<b>Software Support</b>	<b>21</b>
4.1	Installing Operating System	21
4.2	Support CD Information	21
4.2.1	Running Support CD	21
4.2.2	Drivers Menu	21
4.2.3	Utilities Menu	21
4.2.4	ASRock “PC-DIY Live Demo” Program	21
4.2.5	Contact Information	21
<b>Appendix</b>		<b>22</b>
1.	Advanced Menu	22
2.	Security Menu	26
3.	Power Menu	27
4.	Boot Menu	28
5.	Exit Menu	29

---

# Chapter 1 Introduction

Thank you for purchasing ASRock K7VM2 motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

Chapter 1 and 2 of this manual contain introduction of the motherboard and step-by-step installation guide for new DIY system builders. Chapter 3 and 4 contain basic BIOS setup and support CD information. For advanced users' reference, the Appendix appearing on page 22 offers more advanced BIOS setup information.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest memory and CPU support lists on ASRock website as well.

ASRock website <http://www.asrock.com>

## 1.1 Package Contents

ASRock K7VM2 motherboard

(Micro ATX form factor: 9.6" x 7.5", 24.4 x 19.1 cm)

ASRock K7VM2 Quick Installation Guide

ASRock AMD-VIA Series Support CD

1 cable for IDE devices (1 x ATA 66/100/133)

1 cable for floppy drive (1 x ribbon cable)

1 ASRock I/O shield

1 COM port bracket

---

## 1.2 Specifications


<b>Platform:</b>	Micro ATX form factor (9.6" x 7.5", 24.4 x 19.1 cm)
<b>CPU:</b>	Supports Socket A (462 pins) for AMD Athlon™ / Athlon™ XP / Duron™ processor
<b>Chipsets:</b>	North Bridge: VIA KM266, FSB@200/266 MHz, AGP 4X South Bridge: VIA VT8235, supports USB 2.0, ATA 133
<b>Memory:</b>	2 DDR DIMM slots: DDR1 and DDR2 PC1600 (DDR200) / PC2100 (DDR266), Max. 2GB
<b>IDE:</b>	IDE1: ATA 133 / Ultra DMA Mode 6; IDE2: ATA 133 / Ultra DMA Mode 6; Can connect up to 4 IDE devices
<b>Floppy Port:</b>	Supports 2 floppy disk drives
<b>Audio:</b>	2 channels AC'97 Audio
<b>LAN:</b>	Speed: 802.3u (10/100 Ethernet), supports Wake-On-LAN
<b>Hardware Monitor:</b>	CPU temperature sensing; Chassis temperature sensing; CPU overheat shutdown to protect CPU life (ASRock U-COP)(see <b>CAUTION 1</b> ); Voltage monitoring: +12V, +5V, +3V, Vcore; CPU fan tachometer; Chassis fan tachometer
<b>PCI slots:</b>	2 slots with PCI Specification 2.2
<b>AGP slot:</b>	1 universal AGP slot, supports 3.3V/1.5V, 4X/2X/1X AGP card
<b>AMR slot:</b>	1 slot, supports AMR modem card
<b>USB 2.0:</b>	4 default USB 2.0 ports and 1 extra set of header for two additional USB 2.0 ports upgrade (see <b>CAUTION 2</b> )
<b>ASRock I/O™:</b>	PS/2: 1 keyboard port / 1 mouse port; 1 RJ 45 port; 4 rear default USB 2.0 ports; 1 VGA port; 1 parallel port: ECP/EPP support; Audio Jack: Line Out / Line In / Microphone + Game port
<b>BIOS:</b>	AMI legal BIOS; Supports "Plug and Play"; ACPI 1.1 compliance wake up events; SMBIOS 2.3.1 support; CPU frequency stepless control (only for advanced users' reference, see <b>CAUTION 3</b> )
<b>OS:</b>	Microsoft® Windows® 98 SE / ME / 2000 / XP compliant

---

## **CAUTION!**

1. While CPU overheat is detected, the system will automatically shutdown. Please check if the CPU fan on the motherboard functions properly before you resume the system. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.
2. Power Management for USB 2.0 works fine under Microsoft® Windows® XP. It may not work properly under Microsoft® Windows® 98/ME/2000. Please refer to Microsoft® official document at <http://www.microsoft.com/whdc/hwdev/bus/USB/USB2support.msp>
3. Although K7VM2 offers stepless control, it is not recommended to perform over clocking. When the CPU frequency of K7VM2 is set to perform over clocking, other clocks, such as PCI clock, AGP clock, and Memory clock will also be overclocked proportionally. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.


### 1.3 Motherboard Layout

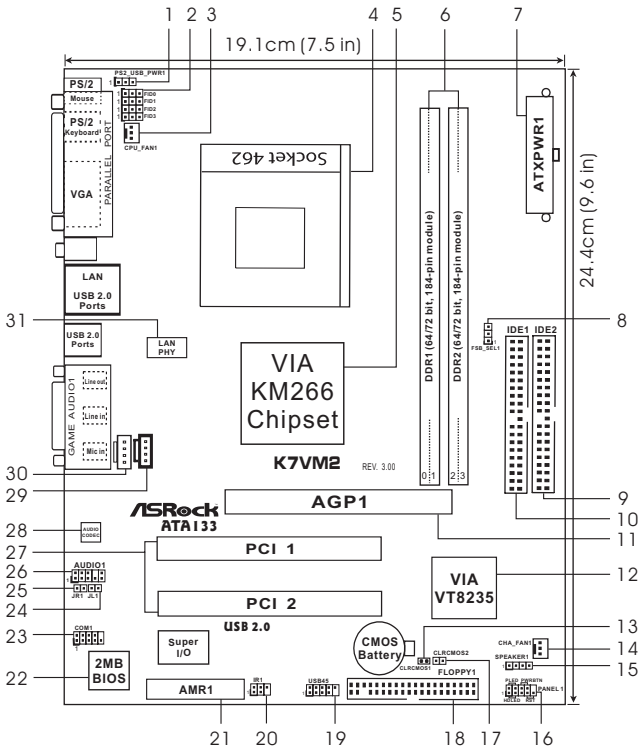

- |    |  |    |  |
|----|--|----|--|
| 1  | PS2_USB_PWR1 jumper                    | 2  | FID Jumpers (FID0, FID1, FID2, FID3)   |
| 3  | CPU fan connector (CPU_FAN1)           | 4  | CPU socket                             |
| 5  | North Bridge controller                | 5  | 184-pin DDR DIMM slots (DDR 1-2)       |
| 7  | ATX power connector (ATXPWR1)          | 6  | System select jumpers (FSB_SEL1)       |
| 9  | Secondary IDE connector (IDE2, Black)  | 7  | Primary IDE connector (IDE1, Blue)     |
| 11 | AGP slot (AGP1)                        | 8  | South Bridge controller                |
| 13 | Clear CMOS (CLRCMOS1, solder points)   | 9  | Chassis fan connector (CHA_FAN1)       |
| 15 | External speaker connector (SPEAKER 1) | 10 | Floppy panel connector (FLOPPY1)       |
| 17 | Clear CMOS (CLRCMOS2, 2-pin jumper)    | 11 | Floppy connector (FLOPPY1)             |
| 19 | USB 2.0 header (USB45, Blue)           | 12 | Infrared module connector (IR1)        |
| 21 | AMR slot (AMR1)                        | 13 | Flash Memory                           |
| 23 | Serial port connector (COM1)           | 14 | JL1 jumper                             |
| 25 | JR1 jumper                             | 15 | Front panel audio connector (AUDIO1)   |
| 27 | PCI slots (PCI 1-2)                    | 16 | External speaker connector (SPEAKER 1) |
| 29 | Internal audio connector: CD1 (Black)  | 17 | Clear CMOS (CLRCMOS2, 2-pin jumper)    |
| 31 | LAN PHY                                | 18 | Floppy connector (FLOPPY1)             |
|    |  | 19 | USB 2.0 header (USB45, Blue)           |
|    |  | 20 | Infrared module connector (IR1)        |
|    |  | 21 | AMR slot (AMR1)                        |
|    |  | 22 | Flash Memory                           |
|    |  | 23 | Serial port connector (COM1)           |
|    |  | 24 | JL1 jumper                             |
|    |  | 25 | Front panel audio connector (AUDIO1)   |
|    |  | 26 | External speaker connector (SPEAKER 1) |
|    |  | 27 | PCI slots (PCI 1-2)                    |
|    |  | 28 | AUDIO CODEC                            |
|    |  | 29 | Internal audio connector: CD1 (Black)  |
|    |  | 30 | Internal audio connector: AUX1 (White) |

---

## 1.4 ASRock I/O™

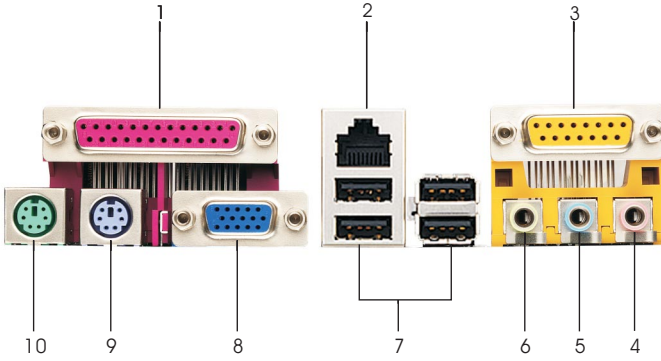

- |   |                             |    |                         |
|---|-----------------------------|----|-------------------------|
| 1 | Parallel port               | 2  | RJ-45 port              |
| 3 | Game port                   | 4  | Microphone (Pink)       |
| 5 | Line In (Light Blue)        | 6  | Line Out (Lime)         |
| 7 | USB 2.0 ports               | 8  | VGA port                |
| 9 | PS/2 keyboard port (Purple) | 10 | PS/2 mouse port (Green) |



---

## Chapter 2 Installation

K7VM2 is a Micro ATX form factor (9.6" x 7.5", 24.4 x 19.1 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

### 2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

### 2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.

**Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.**

---

## 2.3 CPU Installation

- Step 1. Unlock the socket by lifting the lever up to a 90° angle.
- Step 2. Position the CPU directly above the socket such that its marked corner matches the base of the socket lever.
- Step 3. Carefully insert the CPU into the socket until it fits in place.



The CPU fits only in one correct orientation. DO NOT force the CPU into the socket to avoid bending of the pins.

- Step 4. When the CPU is in place, press it firmly on the socket while you push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.



Step 1



Step 2, 3



Step 4

## 2.4 Installation of CPU Fan and Heatsink

AMD Athlon™ / Athlon™ XP / Duron™ family CPUs with a speed of 600 MHz and higher require larger heatsink and cooling fan. Thermal grease between the CPU and the heatsink is also needed to improve heat transfer. Make sure that the CPU and the heatsink are securely fastened and in good contact with each other. For proper installation, please kindly refer to the instruction manuals of vendors of CPU fan and heatsink.

---


## 2.5 Installation of Memory Modules (DIMM)

K7VM2 motherboard provides two 184-pin DDR (Double Data Rate) DIMM slots.



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
- Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.
- Step 3. Firmly insert the DIMM into the slot until the retaining clip snap back in place and the DIMM is properly seated.

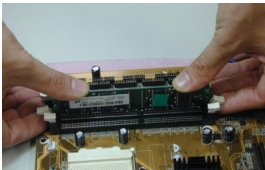

## 2.6 Expansion Slots (PCI, AMR, and AGP Slots)

There are 2 PCI slots, 1 AMR slot, and 1 AGP slot on K7VM2 motherboard.

**PCI slots:** PCI slots are used to install expansion cards that have the 32-bit PCI interface.

**AMR slot:** AMR slot is used to insert an AMR modem card with v.92 Modem functionality.

**AGP slot:** The AGP slot is used to install a graphics card.


The ASRock AGP slot has a special locking mechanism which can securely fasten the graphics card inserted.



### Installing an expansion card

- Step 1. Before installing the expansion card, read the documentation of the expansion card and make necessary hardware settings for the card.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.



## 2.7 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "SHORT". If no jumper cap is placed on the pins, the jumper is "OPEN". The illustration shows a 3-pin jumper whose pin1 and pin2 are "SHORT".

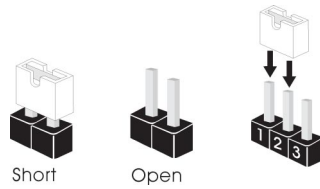

 
 


Jumper	Setting
FSB_SEL1 (see p.7 item 8)	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>FSB 200MHz</p> </div> <div style="text-align: center;">  <p>FSB 266MHz</p> </div> </div>

  Note: The setting of the CPU front side bus frequency of this motherboard is by means of the adjustment of jumper-setting. Please follow the figures above to set the CPU front side bus frequency.

PS2_USB_PWR1 (see p.7 item 1)	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>+5V</p> </div> <div style="text-align: center;">  <p>+5VSB</p> </div> </div>	Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB wake up events.
----------------------------------	--	--

  Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

JR1 (see p.7 item 25)		
JL1 (see p.7 item 24)		
	fig. 1	fig. 2

Note: When you connect speakers in back panel and front panel at the same time,


1. If the jumpers JL1 and JR1 are short (see fig. 1), both front panel and rear panel audio connectors can work.
2. If both jumper caps on JL1 and JR1 are removed (see fig. 2), only front panel audio works.

However, it requires your front panel to support the function.

## FID Jumpers

 (FID0, FID1, FID2, FID3)

(see p.7 item 2)



**Note:** The set of FID jumpers are only for advanced users to adjust the multiplier of CPU.

Please follow the table below to adjust the multiplier of CPU. However, the system will work well without the adjustment of multiplier. You do not have to adjust the multiplier for normal usage.

For multiplier adjustable CPU whose default value is in the range of 5.0x to 12.5x, the maximum multiplier can be adjusted is 12.5x. Please refer to the following table.

Multiplier	FID0	FID1	FID2	FID3
5.0x	1-2	1-2	2-3	1-2
5.5x	2-3	1-2	2-3	1-2
6.0x	1-2	2-3	2-3	1-2
6.5x	2-3	2-3	2-3	1-2
7.0x	1-2	1-2	1-2	2-3
7.5x	2-3	1-2	1-2	2-3
8.0x	1-2	2-3	1-2	2-3
8.5x	2-3	2-3	1-2	2-3
9.0x	1-2	1-2	2-3	2-3
9.5x	2-3	1-2	2-3	2-3
10.0x	1-2	2-3	2-3	2-3
10.5x	2-3	2-3	2-3	2-3
11.0x	1-2	1-2	1-2	1-2
11.5x	2-3	1-2	1-2	1-2
12.0x	1-2	2-3	1-2	1-2
12.5x	2-3	2-3	1-2	1-2

Note: FID4 is at CPU default setting.


For multiplier adjustable CPU whose default value is in the range of 13.0x to 16.0x, the maximum multiplier can be adjusted is 24.0x. Please refer to the following table.

Multiplier	FID0	FID1	FID2	FID3
13.0x	1-2	1-2	2-3	1-2
13.5x	2-3	1-2	2-3	1-2
14.0x	1-2	2-3	2-3	1-2
15.0x	1-2	1-2	1-2	2-3
16.0x	1-2	2-3	1-2	2-3
16.5x	2-3	2-3	1-2	2-3
17.0x	1-2	1-2	2-3	2-3
18.0x	2-3	1-2	2-3	2-3
19.0x	2-3	1-2	1-2	1-2
20.0x	2-3	2-3	1-2	1-2
21.0x	2-3	2-3	2-3	1-2
22.0x	2-3	1-2	1-2	2-3
23.0x	1-2	2-3	2-3	2-3
24.0x	2-3	2-3	2-3	2-3

Note: FID4 is at CPU default setting.

For example, "Athlon XP 2000+" is an 1666MHz CPU: 12.5 (Multiplier) X 133MHz (External frequency) = 1666MHz

 FID jumpers setting:





The jumper caps are not provided by ASRock. Please understand that ASRock does not guarantee and support the adjustment of multiplier. These jumpers setting may not apply to all multiplier-locked or even some unlocked AMD CPU. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.

---

### Clear CMOS

---

CLRCMOS1



solder points

(see p.7 item 13)

CLRCMOS2



2-pin jumper



(see p.7 item 17)

Note: CLRCMOS1 and CLRCMOS2 allow you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. There are 2 ways for you to clear and reset the system parameters to the default setup. Please turn off the computer and unplug the power cord, then you may either short the solder points on CLRCMOS1 by using metal material, e.g., a paper clip for 3 seconds; or you may use a jumper cap to short the pin on CLRCMOS2 for 3 seconds. Please remember to remove the paper clip or the jumper cap after clearing the CMOS.




## 2.8 Connectors




Connectors are NOT jumpers. DO NOT place jumper caps over these connectors.


Connector	Figure	Description
FDD connector (33-pin FLOPPY1) (see p.7 item 18)		


Note: Match the red marking on the floppy ribbon cable with Pin1.

Primary IDE connector (Blue) (39-pin IDE1, see p.7 item 10)	Secondary IDE connector (Black) (39-pin IDE2, see p.7 item 9)
	
connect the blue end to the motherboard	connect the black end to the IDE devices
	
80-Pin ATA 100/133 cable	

Note: To optimize compatibility and performance, please connect your hard disk drive to the primary IDE connector (IDE1, blue) and CD-ROM to the secondary IDE connector (IDE2, black).

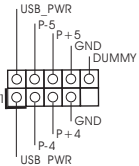USB 2.0 header (9-pin USB45) (see p.7 item 19)		ASRock I/O™ provides 4 default USB 2.0 ports on the rear panel. If those 4 USB 2.0 ports on the rear panel are not sufficient, this USB 2.0 header is available for 2 additional USB 2.0 ports.
--	--	---

 Infrared module connector (5-pin IR1) (see p.7 item 20)		This connector supports an optional wireless transmitting and receiving infrared module.
---	---	--

 
Internal audio connectors (4-pin CD1, 4-pin AUX1) (CD1: see p.7 item 29) (AUX1: see p.7 item 20)		These connectors allow you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.
---	---	---

---

### Front panel audio connector

(9-pin AUDIO1)

(see p.7 item 26)

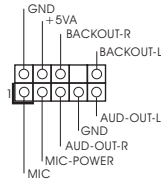


This is an interface for front panel audio cable that allows convenient connection and control of audio devices.

---

### System panel connector

(9-pin PANEL1)

(see p.7 item 16)

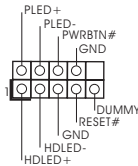


This connector accommodates several system front panel functions.

---

### External speaker connector

 (4-pin SPEAKER 1)

(see p.7 item 15)




This connector allows you to attach to an external speaker.

---

### Chassis fan connector

 (3-pin CHA\_FAN1)

(see p.7 item 14)




Connect the fan cable to the connector matching the black wire to the ground pin.

---

### CPU fan connector

 (3-pin CPU\_FAN1)

(see p.7 item 3)



Connect the fan cable to the connector matching the black wire to the ground pin.

---

### ATX power connector

(20-pin ATXPWR1)

(see p.7 item 7)




Connect an ATX power supply to the connector.

---

### Serial port connector

(9-pin COM1)

(see p.7 item 23)

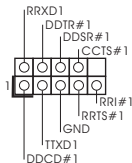

This COM1 header supports a serial port module.



---

# Chapter 3 BIOS Setup

## 3.1 BIOS Setup Utility

This section explains how to use the BIOS Setup Utility to configure your system. The Flash Memory on the motherboard stores the BIOS Setup Utility. You may run the BIOS Setup Utility when you start up the computer. Please press <F2> during the Power-On-Self-Test (POST) to enter the BIOS Setup Utility, otherwise, POST continues with its test routines.

If you wish to enter the BIOS Setup after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.

The BIOS Setup Utility is designed to be user-friendly. It is a menu-driven program, which allows you to scroll through its various sub-menus and select among the predetermined choices.



Because the BIOS software is constantly being updated, the following BIOS setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

### 3.1.1 BIOS Menu Bar

The top of the screen has a menu bar with the following selections:

<b>MAIN</b>	Sets up the basic system configuration
<b>ADVANCED</b>	Sets up the advanced features
<b>SECURITY</b>	Sets up the security features
<b>POWER</b>	Configures Power Management features
<b>BOOT</b>	Configures the default system device that is used to locate and load the Operating System
<b>EXIT</b>	Exits the current menu or the BIOS Setup

To access the menu bar items, press the right or left arrow key on the keyboard until the desired item is highlighted.

### 3.1.2 Legend Bar

At the bottom of the Setup Screen is a legend bar. The following table lists the keys in the legend bar with their corresponding functions.

Navigation Key(s)	Function Description
<F1>	Displays the General Help Screen
<ESC>	Jumps to the Exit menu or returns to the upper menu from the current menu
↑ / ↓	Moves cursor up or down between fields
← / →	Selects menu to the left or right
+ / -	Increases or decreases values
<Enter>	Brings up a selected menu for a highlighted field
<F9>	Loads all setup items to the default values
<F10>	Saves changes and exits BIOS Setup

### 3.2 Main Menu

When you enter the BIOS Setup Utility, the following screen appears.

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Main	Advanced	Security	Power Boot Exit
System Date		Jun 23 2003 Mon	
System Time		20:07:40	
▶ Floppy Drives		[ Setup Help ]	
▶ IDE Devices		Month: Jan - Dec	
BIOS Version		Day: 01 - 31	
Processor Type		Year: 1980 - 2099	
Processor Speed		K7VM2 BIOS P1.00	
L1 Cache Size		AMD Athlon(tm) XP 2600+	
L2 Cache Size		2133 MHz	
Total Memory		128 KB	
DDR1		256 KB	
DDR2		480 MB + 32 MB Share Memory	
		512 MB / 133 MHz (DDR 266)	
		None	
F1:Help	↑↓:Select Item	+/-:Change Values	F9:Setup Defaults
Esc:Exit	←→:Select Menu	Enter>Select	F10:Save & Exit
		▶Sub-Menu	

#### System Date [Month/Day/Year]

Set the system date that you specify. Valid values for month, day, and year are Month: (Jan to Dec), Day: (1 to 31), Year: (up to 2099). Use ↑ ↓ keys to move between the Month, Day, and Year fields.

#### System Time [Hour:Minute:Second]

Set the system to the time that you specify. Use ↑ ↓ keys to move between the Hour, Minute, and Second fields.

#### Floppy Drives

Use this to set the type of floppy drives installed.

#### IDE Devices

Use this to configure IDE devices.

## TYPE

To set the type of the IDE device, first, please select “IDE Devices” on Main menu and press <Enter> to get into the sub-menu. Then, select among “Primary IDE Master”, “Primary IDE Slave”, “Secondary IDE Master”, and “Secondary IDE Slave” to make configuration of its type. Below are the configuration options.

AMIBIOS SETUP UTILITY - VERSION 3.31a	
Main	
Primary IDE Master	
Type	Auto
Cylinders	
Heads	
Write Precompensation	
Sectors	
Maximum Capacity	
LBA Mode	On
Block Mode	On
Fast Programmed I/O Modes	Auto
32 Bit Transfer Mode	On
Ultra DMA Mode	Auto
[ Setup Help ]	
Select how to set the parameters of drive.	
Or	
Select [AUTO] to set all HDD parameters automatically.	
F1:Help	F11:Select Item
Esc:Previous Menu	+/-:Change Values
	Enter:Select
	→Sub-Menu
	F9:Setup Defaults
	F10:Save & Exit

**[USER]:** It allows user to manually enter the number of cylinders, heads, and sectors per track for the drive.



Before attempting to configure a hard disk drive, make sure you have the correct configuration information supplied by the drive manufacturer. Incorrect settings may cause the system to fail to recognize the installed hard disk.

**[Auto]:** Select [Auto] to automatically detect hard disk drive. If auto-detection is successful, the BIOS Setup automatically fills in the correct values for the remaining fields on this sub-menu. If the auto-detection fails, it may be due to that the hard disk is too old or too new. If the hard disk was already formatted on an older system, the BIOS Setup may detect incorrect parameters. In these cases, select [User] to manually enter the IDE hard disk drive parameters.



After entering the hard disk information into BIOS, use a disk utility, such as FDISK, to partition and format new IDE hard disk drives. This is necessary so that you can write or read data from the hard disk. Make sure to set the partition of the Primary IDE hard disk drives to active.

---

**[CD/DVD]:** This is used for IDE CD/DVD drives.

**[ARMD]:** This is used for IDE ARMD (ATAPI Removable Media Device), such as MO.

### **Cylinders**

This is used to configure the number of cylinders. Refer to the drive documentation to determine the correct value.

### **Heads**

This is used to configure the number of read/write heads. Refer to the drive documentation to determine the correct values.

### **Write Pre-compensation**

Enter Write Pre-compensation sector. Refer to the drive documentation to determine the correct value.

### **Sectors**

This is used to configure the number of sectors per track. Refer to the drive documentation to determine the correct value.

### **Maximum Capacity**

This field shows the drive's maximum capacity as calculated by the BIOS based on the drive information you entered.

### **LBA Mode**

This allows user to select the LBA mode for a hard disk > 512 MB under DOS and Windows; for Netware and UNIX user, select [Off] to disable the LBA mode.

### **Block Mode**

Set the block mode to [On] will enhance hard disk performance by reading or writing more data during each transfer.

### **Fast Programmed I/O Modes**

This allows user to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

### **32 Bit Transfer Mode**

It allows user to enable 32-bit access to maximize the IDE hard disk data transfer rate.

### **Ultra DMA Mode**

Ultra DMA capability allows improved transfer speeds and data integrity for compatible IDE devices. Set to [Disabled] to suppress Ultra DMA capability.

## **3.3 Advanced, Security, Power, Boot, and Exit Menus**

Detailed descriptions of these menus are listed in the Appendix. See page 22.

---

# Chapter 4 Software Support

## 4.1 Install Operating System

This motherboard supports various Microsoft® Windows® operating systems: 98 SE/ ME/ 2000/ XP. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

## 4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard features.

### 4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu did not appear automatically, locate and double click on the file ASSETUP.EXE from the BIN folder in the Support CD to display the menus.

### 4.2.2 Drivers Menu

The Drivers Menu shows the available devices drivers if the system detects installed devices. Please install the necessary drivers to activate the devices.

### 4.2.3 Utilities Menu

The Utilities Menu shows the applications software that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

### 4.2.4 ASRock PC-DIY Live Demo Program

ASRock presents you a multimedia PC-DIY live demo, which shows you how to install your own PC system step by step. You can find the file through the following path:

..\MPEGAV\AVSEQ01.DAT

To see this demo program, you can run Microsoft® Media Player® to play the file.

### 4.2.5 Contact Information


If you need to contact ASRock or want to know more about ASRock, welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.

---

# Appendix: Advanced BIOS Setup

This section will introduce you the following BIOS Setup menus: “Advanced,” “Security,” “Power,” “Boot,” and “Exit.”

## 1. Advanced BIOS Setup Menu

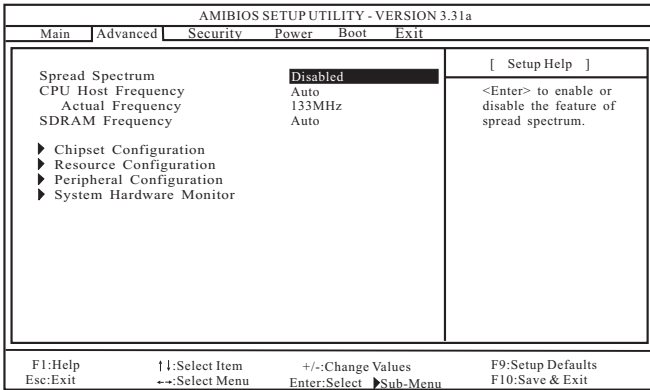

### Spread Spectrum:

This field should always be [Disabled] for better system stability.

### CPU Host Frequency:

**[Auto]:** It is recommended to select this option, which will let the CPU host frequency of this motherboard determined by the jumper-setting.

**[Manual]:** This allows user to set the CPU host frequency manually. However, this is not recommended unless user thoroughly knows the feature.

Wrong setup may cause problems during operation.

### SDRAM Frequency:

If set to [Auto], the motherboard will detect the inserted memory module(s) and automatically assign appropriate frequency. You may select other value as operating frequency: [100MHz (DDR200)], [133MHz (DDR266)].

## Chipset Configuration:

AMIBIOS SETUP UTILITY - VERSION 3.31a		
Advanced		
Chipset Configuration		[ Setup Help ]
AGP Mode	4x	<Enter> to select AGP Mode: 4X, 2X, 1X.
AGP Aperture Size	128MB	
AGP Fast Write	Disabled	
Onboard VGA Share Memory	32MB	
PCI Delay Transaction	Disabled	
USB Controller	Enabled	
USB Device Legacy Support	Disabled	
SDRAM CAS# Latency	2.5	
Over Vcore Voltage	Disabled	
F1:Help      ↑:Select Item      +/-:Change Values      F9:Setup Defaults		
Esc:Previous Menu      Enter:Select      ▶:Sub-Menu      F10:Save & Exit		

**AGP Mode:** This motherboard supports the AGP 4X interface that transfers video data at 1066MB/s. Other configuration options are 2X mode and 1X mode.

**AGP Aperture Size:** It refers to a section of the PCI memory address range used for graphics memory. It is recommended to leave this field at the default value unless the installed AGP card's specifications requires other sizes.

**AGP Fast Write:** This allows you to enable or disable the feature of AGP fast write protocol support.

**OnBoard VGA Share Memory:** This allows you to select the size of share memory for onboard VGA. Onboard VGA will get better resolution if larger size of share memory is selected. Please do not select [None] if AGP or PCI graphics card is not inserted.

**PCI Delay Transaction:** Enable PCI Delay Transaction feature will free the PCI Bus when the CPU is accessing 8-bit ISA cards. Disable this feature when using ISA cards that are not PCI 2.1 compliant.

**USB Controller:** Use this to enable or disable the use of USB controller.

**USB Device Legacy Support:** Use this to enable or disable the support to emulate legacy I/O devices such as mouse, keyboard,... etc.

### **SDRAM CAS# Latency:**

This is used to adjust the means of memory accessing. Configuration options: [2.5], [2].

**Over Vcore Voltage:** Enable this item will increase the CPU Vcore voltage around +3% or +6%. The default value is [Disabled].



It is not recommended to enable "Over Vcore Voltage" feature. Doing so may cause CPU damage.

## Resource Configuration:

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Advanced			
Resource Configuration		[ Setup Help ]	
PCI Latency Timer (PCI Clocks)	32	<Enter> to select PCI clocks. Leave on default setting for the best PCI performance.	
Primary Graphics Adapter	PCI		
F1:Help Esc:Previous Menu	↑:Select Item	+/-:Change Values Enter:Select	F9:Setup Defaults F10:Save & Exit
		▶Sub-Menu	

**PCI Latency Timer (PCI Clocks):** The default is 32. It is recommended to keep the default value unless the installed PCI expansion cards' specifications require other settings.

**Primary Graphics Adapter:** Select PCI or AGP as the primary graphics adapter.

## Peripheral Configuration:

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Advanced			
Peripheral Configuration		[ Setup Help ]	
OnBoard FDC	Auto	<Enter> to enable or disable the floppy drive controller.	
OnBoard Serial Port	Auto		
OnBoard Infrared Port	Disabled		
OnBoard Parallel Port	Auto		
Parallel Port Mode	ECP+EPP		
EPP Version	1.9		
Parallel Port IRQ	Auto		
Parallel Port DMA Channel	Auto		
OnBoard Midi Port	Disabled		
Midi IRQ Select	5		
OnBoard Game Port	200h		
OnBoard IDE	Both		
OnBoard LAN	Enabled		
OnBoard AC'97 Audio	Auto		
OnBoard MC'97 Modem	Auto		
F1:Help Esc:Previous Menu	↑:Select Item	+/-:Change Values Enter:Select	F9:Setup Defaults F10:Save & Exit
		▶Sub-Menu	

**OnBoard FDC:** Use this to enable or disable floppy drive controller.

**OnBoard Serial Port:** Use this to set addresses for the onboard serial ports or disable serial ports. Configuration options: [Auto], [Disabled], [3F8 / IRQ4 / COM1], [2F8 / IRQ3 / COM2], [3E8 / IRQ4 / COM3], [2E8 / IRQ3 / COM4].

**OnBoard Infrared Port:** You may select [Auto] or [Disabled] for this onboard infrared port feature.



---

**OnBoard Parallel Port:** Select Parallel Port address or disable Parallel Port.

Configuration options: [Auto], [Disabled], [378], [278].

**Parallel Port Mode:** Set the operation mode of the parallel port. The default value is [ECP+EPP]. If this option is set to [ECP+EPP], it will show the EPP version in the following item, "EPP Version".

**OnBoard Midi Port:** Select address for Midi Port or disable Midi Port.

Configuration options: [Disabled], [330], [300], [290], [292].

**Midi IRQ Select:** Use this to select Midi IRQ. Configuration options: [3], [4], [5], [7], [10], [11].

**OnBoard Game Port:** Select address for Game Port or disable Game Port.

Configuration options: [Disabled], [200h], [208h].

**OnBoard IDE:** You may enable either the primary IDE channel or the secondary IDE channel. Or you may enable both the primary and the secondary IDE channels by selecting [Both]. Set to [Disabled] will disable the both.

Configuration options: [Disabled], [Primary], [Secondary], [Both].

**OnBoard LAN:** This allows you to enable or disable the onboard LAN feature.

**OnBoard AC'97 Audio:** Select [Disabled], [Auto] or [Enabled] for the onboard AC'97 Audio feature.

**OnBoard MC'97 Modem:** Select [Auto] or [Disabled] for the onboard MC'97 Modem feature.

**System Hardware Monitor:** You can check the status of the hardware on your system. It allows you to monitor the parameters for CPU temperature, Motherboard temperature, CPU fan speed, and critical voltage.

AMIBIOS SETUP UTILITY - VERSION 3.31a	
Advanced	
System Hardware Monitor	[ Setup Help ]
CPU Temperature	35°C / 95°F
M/B Temperature	27°C / 82°F
CPU FAN Speed	3110 RPM
Chassis FAN Speed	0 RPM
Vcore	1.72 V
+ 3.30V	3.31 V
+ 5.00V	4.97 V
+ 12.00V	12.16 V

F1:Help      ↑:Select Item      +/-:Change Values      F9:Setup Defaults  
Esc:Previous Menu      Enter:Select      ▶:Sub-Menu      F10:Save & Exit

## 2. Security Setup Menu

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Main	Advanced	Security	Power Boot Exit
Supervisor Password	Clear		[ Setup Help ]
User Password	Clear		<Enter> to set the supervisor password.
Set Supervisor Password	[ Enter ]		
Set User Password	[ Enter ]		
Password Check	Setup		
F1:Help Esc:Exit	↑:Select Item ←:Select Menu	+/-:Change Values Enter:Select	F9:Setup Defaults F10:Save & Exit

**Supervisor Password:** This field shows the status of the Supervisor Password.

**[Clear]:** No password has been set.

**[Set]:** Supervisor password has been set.

**User Password:** This field shows the status of the User Password.

**[Clear]:** No password has been set.


**[Set]:** User password has been set.

**Set Supervisor Password:** Press <Enter> to set Supervisor Password. Valid password can be a 1 to 6 alphanumeric characters combination. If you already have a password, you must enter your current password first in order to create a new password.

**Set User Password:** Press <Enter> to set User Password. Valid password can be a 1 to 6 alphanumeric characters combination. If you already have a password, you must enter your current password first in order to create a new password.

**Password Check:** Select the check point for "Password Check". Configuration options: [Setup], [Always]. If [Setup] option is selected, the "Password Check" is performed before BIOS setup. If [Always] option is selected, the "Password Check" is performed before both boot-up and BIOS setup.

### 3. Power Setup Menu

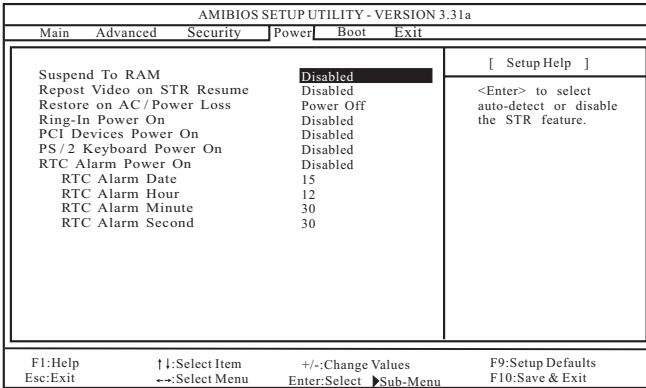

**Suspend to RAM:** This field allows you to select whether to auto-detect or disable the Suspend-to-RAM feature. Select [Auto] will enable this feature if the system supports it.

**Repost Video on STR Resume:** This feature allows you to repost video on STR resume. It is recommended to enable this feature under Microsoft® Windows® 98 / ME.

**Restore on AC/Power Loss:** This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

**Ring-In Power On:** Use this to enable or disable Ring-in signals to turn on the system from the power-soft-off mode.

**PCI Devices Power On:** Use this to enable or disable PCI devices to turn on the system from the power-soft-off mode.

**PS/2 Keyboard Power On:** Use this to enable or disable PS/2 keyboard to turn on the system from the power-soft-off mode.

**RTC Alarm Power On:** Use this to enable or disable RTC (Real Time Clock) to power on the system. If [Enable] is selected, you must fill the RTC Alarm Date / Hour / Minute / Second sub-fields with the actual wake up time you desire.

---

## 4. Boot Setup Menu

AMIBIOS SETUP UTILITY - VERSION 3.31a					
Main	Advanced	Security	Power	Boot	Exit
Quick Boot Mode				Enabled	[ Setup Help ]
Boot Up Num-Lock				On	<Enter> to enable or disable the quick boot mode.
Boot To OS/2				No	
Boot From Network				Disabled	
▶ Boot Device Priority					
F1:Help	↑:Select Item	+/-:Change Values	F9:Setup Defaults		
Esc:Exit	←:Select Menu	Enter:Select	▶Sub-Menu	F10:Save & Exit	

**Quick Boot Mode:** Enable this mode will speed up the boot-up routine by skipping memory retestings.

**Boot Up Num-Lock:** If this is enabled, it will automatically activate the Numeric Lock function after boot-up.


**Boot To OS/2:** This enables boot-up to OS/2 operating system.

**Boot From Network:** Use this to enable or disable “boot from network” feature.

**Boot Device Priority:** This allows you to set the boot device priority.

---

## 5. Exit Menu

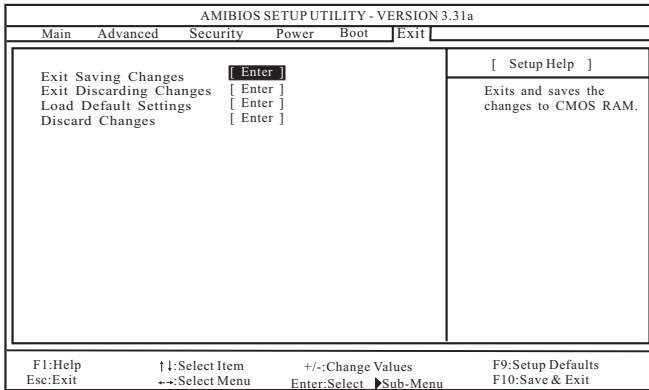

**Exit Saving Changes:** After you enter the sub-menu, the message “Save current settings and exit” will appear. If you press <ENTER>, it will save the current settings and exit the BIOS SETUP Utility.

**Exit Discarding Changes:** After you enter the submenu, the message “Quit without saving changes” will appear. If you press <ENTER>, you will exit the BIOS Setup Utility without making any changes to the settings.

**Load Default Settings:** After you enter the submenu, the message “Load default settings” will appear. If you press <Enter>, it will load the default values for all the setup configuration.

**Discard Changes:** After you enter the sub-menu, the message “Load setup original values” will appear. If you press <ENTER>, original values will be restored and all changes are discarded.