

User's Guide

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- Re-orient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

http://www.samsungodd.com
www.samsungelectronics.com
BG68-00342A Rev.03

Setting Up the Device Driver

Automatic Setup

- 1 Insert the setup diskette in the diskette drive and change the directory to A:, where A: is the diskette drive.
2 Type CDSETUP and press [Enter].
3 Reboot the computer.

Manual Setup

- 1 Make the C:\SAMSUNG directory.
2 Copy the files from the diskette to the C:\SAMSUNG directory.
3 Edit the CONFIG.SYS file.
4 Edit the AUTOEXEC.BAT file.


```
LAST DRIVE=Z
DEVICE=C:\SAMSUNG\MSDCDEX.D\SSCD000.V
```

```
.....
C:\SAMSUNG\MSDCDEX.D\SSCD000
```

- 5 Reboot the computer.

Safety Precautions

The following diagrams illustrate the precautions to be taken when using your DVD-ROM drive.

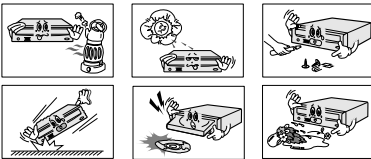

* Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


You must not use the drive in any manner other than that specified in this guide.

CAUTION Do not attempt to repair the DVD-ROM drive yourself. Contact your dealer or local SAMSUNG representative for all repairs. If you make any adjustments or perform any operations other than those specified in this guide, you run the risk of exposure to hazardous radiation.

WARRANTY Please refer to the Samsung limited warranty statements.

- Precautions 1. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
2. Always check each disc for cracks before using it.
3. Do not use poor quality discs.
4. Avoid exposing your eyes or skin to direct or scattered radiation.

Your DVD-ROM Drive

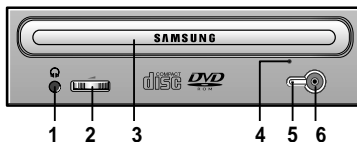

- 1. Connector for stereo headphones with a 3.6 mm stereo mini-jack
2. Headphone volume control
3. Disc compartment (the compartment opens and closes automatically when you press the Eject button)
4. Emergency eject hole (if the compartment does not open when you press the Eject button, power off the computer, insert a pin or unfolded paper clip in the hole and push firmly)
5. Indicator light (when it is green, a disc is being read)
6. Eject button



- 1. Two-pin digital audio output terminal for use with a sound or MPEG card supporting digital audio features
2. Four-pin sound output terminal for use with a sound card
3. Master/slave select terminal
4. 40-pin host IDE interface connector
5. 4-pin power terminal

Using the DVD-ROM Drive

To play audio or video CDs in your DVD-ROM drive, proceed as follows.

- 1 Push the power button and boot the computer.
2 After booting the computer, open the disc compartment by pressing the Eject button.
3 Insert the disc (CD/DVD) with the label on the disc facing upwards and close the disc compartment by pressing the Eject button.
4 Click on the Device Manager tab.

Playing Audio CDs Run the CD player supplied with Windows or your sound card. You can listen to the CD by connecting headphones to the appropriate connector. If you have installed the appropriate player, such as Microsoft Windows Media Player, you can adjust the volume using the headphone volume control on the drive front panel.

Playing Video CDs Set up and run the SOFT MPEG program.

Storing and Cleaning Your Discs

To ensure a long service life for your discs and drive, follow the precautions below when storing and cleaning your discs.

- 1 Do not place a disc in direct sunlight.
2 Store a disc vertically in a well-ventilated and stable location.
3 Do not write or attach a label on a disc.
4 Do not drop a disc or place heavy objects on it.
5 Do not touch the surface of a disc; hold it by the edges.
6 To clean a disc, polish lightly from the inside of the disc to the outside with a soft cotton cloth.
7 Do not leave the disc compartment open when you are not using it.

Upgrading the Firmware Flash Memory

The product firmware can be upgraded by downloading the updated file from the following Web site:
http://www.samsungodd.com
www.samsungelectronics.com

System Requirements

Before you install the DVD-ROM drive, we strongly recommend that you check that your setup meets the system requirements listed below.

Table with 2 columns: Item, Description. Includes Computer (Intel Pentium III or higher), Disk space (100 MB minimum), and Windows version (Windows 95 OSR2 / 98 / 2000 / ME / XP).

* This product has been set at the UDMA mode. It may cause trouble due to the compatibility of a specific board or system. In this case, download the latest version of "Firmware" which supports the DMA Mode.

Installing the DVD-ROM Drive

To install your DVD-ROM drive in the PC, proceed as follows.


- 1 Make sure that the PC is powered off and disconnected from any power source.
2 If necessary, attach a horizontal bracket to both sides of the drive.
3 Remove the cover from a free expansion slot and install the DVD-ROM drive, as shown in the illustration.

If you have no free expansion slot, install the drive in place of the diskette drive.

Solving Technical Problems

Table with 2 columns: Problem, Meaning / Solution. Covers issues like 'The DVD-ROM drive is not detected by the computer', 'No sound is heard from an audio CD', and 'The disc compartment will not open'.

 Connecting the Cables



- 1 Connecting the power cable
2 Installing a jumper on the master/slave select terminal
3 Connecting the IDE cable

- 4 Connecting the audio cable from a sound card

Technical Specifications

SAMSUNG continually strives to improve its products. Both the design specifications and these user instructions are thus subject to change without notice.

Table with 2 columns: ITEM, SD - 616. Lists specifications for Disc, Drive Performance, Error Rate, Front Panel, Rear Panel, Operating Environment, and General.

* In case of the PC without UDMA, it may have a different DVD data transmission rate.

