

**INSTRUCTIONS FOR THE USE AND CARE
OF ZANUSSI IH 6048 AND IH 9048
COOKER HOODS**



It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

Warnings and Guidance

These warnings are provided in the interest of safety. You must read them carefully before installing or using the appliance.

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.
- Any installation work must be undertaken by a qualified electrician or competent person.
- It is dangerous to alter the specifications or modify the product in any way.
- This product should be serviced by an authorised Zanussi Service Force Centre, and only genuine Zanussi spare parts should be used.
- If the air is to be extracted through a ventilation system, you must ensure that the ducting for the appliance is not connected to any existing ventilation system which is being used for any other purpose.
- Read the installation instructions carefully.
- Never leave frying pans unattended during use as overheated fats and oils may catch fire.
- Never do flambe cooking under a cooker hood.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by an inexperienced person may cause injury or serious malfunctioning. Refer to your local Zanussi Service Force Centre. Always insist on genuine Zanussi spare parts.

CONTENTS

Specifications	Page 3
General Information	Page 4
Electrical Connections	Page 5
Installation	Page 6
How To Use	Page 7
Maintenance And Cleaning	Page 8
Servicing	Page 9
Service Agent Directory	Page 10
Peace Of Mind For Twelve Months	Page 14
Or Five Years	Page 14

SPECIFICATIONS

IH6048

Dimensions

Height	350mm
Width	600mm
Closed depth	270 - 360mm
Open depth	540 - 630mm
Ducting Outlet Position	Top
Total Motor Rating	225W
Light Rating	2 x 40W
Total Rating	305W
Max Airflow	480m ³ /hr
Max Noise Level	61db
Supply Voltage	220 - 240V (50Hz)

IH9048

Dimensions

Height	350mm
Width	900mm
Closed depth	270 - 360mm
Open depth	540 - 630mm
Ducting Outlet Position	Top
Total Motor Rating	225W
Light Rating	2 x 40W
Total Rating	305W
Max Airflow	480m ³ /hr
Max Noise Level	61db
Supply Voltage	220 - 240V (50Hz)

GENERAL INFORMATION

The hood is designed for domestic use only.

This is an integrated cooker hood designed to be sited between wall cabinets and fitted with a decor panel to match the cabinets. This is then pulled out to its working position. The cooker hood can be used either to recirculate the air carrying cooking smells and grease particles through the cleansing grease and charcoal filters (recirculating mode) or to extract the air to the atmosphere (extraction mode).

IMPORTANT

When installed above an electric cooking appliance, the minimum distance between the surface of the hob elements and the underside of the cooker hood must be 65cm (25 1/2").

When installed above a gas cooking appliance, the minimum distance between the surface of the hob pan supports, and the underside of the cooker hood must be 70cm (27 1/2").

This hood should not be fitted above a cooking appliance with a high level grill without contacting the manufacturer of the cooking appliance for specific instructions since it is probable that the hood will affect the performance of the grill.

WARNING

The fan motor of the appliance incorporates a thermal cut-out device which could operate if the hood is installed below the minimum height as instructed, or if the motor becomes overheated. If the cut-out device is actuated, switch off the fan motor to cool. The cut-out device will automatically reset itself when the fan motor has cooled sufficiently.

WARNING

If the room where the cooker hood is to be used contains a fuel burning appliance such as a central heating boiler, then its flue must be of the room sealed or balanced flue type.

If other types of flue or appliance are fitted ensure that there is an adequate supply of air to the room.

The cooker hood ducting (extraction version) must never be connected to central heating flues, radiators or water heaters etc.

THE ELECTRICAL CONNECTIONS

WARNING: THIS APPLIANCE MUST BE EARTHED .

This appliance must be connected to the mains supply through either a suitable 3-pin plug and socket, or to the mains supply by means of a 13amp switched fuse spur conforming to BS5733. The isolation switch should be easily accessible after installation.

IMPORTANT

Before connection to the mains supply ensure that the mains voltage corresponds to the voltage listed on the rating plate inside the cooker hood.

GREEN AND YELLOW - EARTH
BLUE - NEUTRAL
BROWN - LIVE

As the colours of the wires in the mains lead of this cooker hood may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol \perp or coloured green and yellow.

The wire which is coloured blue must be connected to the terminal in the plug which is marked with the letter 'N' or coloured black.

The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter 'L' or coloured red.

If in doubt, consult a competent electrician.

This appliance complies with EEC Directive No 76/899 dated 4/11/1976 relating to the suppression of radio and television interference.

Note: This appliance must be protected by a 3amp fuse, if a 13amp BS 1363 plug is used, or, if any other type of plug is used, it must be protected by a 5Amp fuse in the plug or adaptor or at the distribution board.

INSTALLATION

Wall Fitting

The hood may be fixed to any rigid vertical surface. If it is necessary to fix the unit to a hollow construction, plaster or partition board structure then it must be sufficiently reinforced to be rigid in the area of the hood fixings.

Use the paper template provided, place on the wall and mark bracket fixing points. Check the distances of the holes are correct with the dimensions as stated on the template.

At this stage it is important to allow 15mm (1/2") clear space above the hood to enable it to be hooked onto the brackets and for any subsequent removal for cleaning or servicing.

When drilling the holes for the wall fixing screws care must be taken to ensure that they are quite level as there is only minimal vertical adjustment of the fixing brackets.

The brackets should be fixed with the round end at the bottom.

Once the brackets are secured the hood can be hooked into position.

Access to the wall levelling screws is from above the hood. These are located in the two extension arms at either side of the hood which fit over the wall brackets to support the hood. Turn these screws until the hood is positioned at right angles to the wall cabinet carcass, then fit four screws through the plastic counter sunk plugs into the adjoining wall cabinet side panels to fully secure the hood.

The hood should be secured to the adjoining cabinets at each side of the hood using the 4 x 12mm (1/2") round headed screws provided. The screws holes are located at each side of the casing, behind the grille at the bottom of the guide.

Adjust the lower spacer panel at the rear of the hood to close off the gap.

Ducting Fitting

If the hood is to be ducted to the atmosphere the selector on the diffuser must be set in Position 1. The charcoal filter is not required with this system.

The ducting used must be 100mm (4") diameter and where flexible ducting is fitted it should not be turned through very tight bends as this may impair the performance of the hood. If the distance is greater than 3m the efficiency of the hood could be impaired. This length should be reduced 1m for every 90 degree bend installed in the duct run.

Fitting The Decor Panel

To fit the decor panel the complete visor assembly will have to be removed. To do this pull open the visor into the operating position. Then press downward on the visor release catch, located on the left hand side of the casing behind the visor. It can then be removed.

The dimensions of the decor panel to be fitted should be:

IH6048

59.6cm (23 1/2") wide

35cm (13 3/4") minimum height

IH9048

89.6cm (35 5/16") wide

35cm (13 3/4") minimum height

Use the paper template provided to mark the fixing holes on the reverse side of the decor panel. Ensure that the template is aligned with the top edge of the decor panel. Should a decor panel with a measurement greater than 35cm (13 3/4") in height be fitted, failure to align the top edge of the template with the top edge of the decor panel will prevent the visor opening when installed. Measure before drilling to check that the distances of the holes as stated on the template are correct as the template could have altered due to exposure to dampness after manufacture.

To refit the visor, relocate the guides at the top of the visor into the tracks at the top front corners in the hood casing. Lower the bottom edge of the visor until the lower guides align with the lower tracks, push in the visor until an audible click is heard. The visor may now be opened and closed in its normal function.

IMPORTANT


Should the decor panel not be fitted as advised it could affect the opening of the visor panel.

HOW TO USE

Operating Instructions

The cooker hood functions are controlled by three slide switches, an automatic microswitch and selector slide lever.


The three slide switches which are located on the right hand side beneath the visor panel, control fan speed and work surface illumination.

The switch marked with the fan symbol  and the 0-1 controls the power supply to the fan and should be used in conjunction with the switch marked 1-2-3 which controls the fan speed.

Position 1: Should be selected when simmering or when using only one pan.

Position 2: Should be selected for normal cooking, up to four pans.

Position 3: Should be selected when frying or cooking foods with strong odours.

The switch marked with the symbol , controls the power to the worktop illumination. The concealed microswitch acts as an override and will switch the hood off, whatever selection is made with the slider switches when the visor panel is closed. When the visor is pulled open the hood will resume working at its previous setting.

The changeover slide lever for selecting recirculating or extraction mode is situated on the diffuser behind the air inlet grille. To open the grille press inwardly on the two slide catch fasteners located in either side of the lighting diffuser. The grille can be lowered into an intermediate position, and can be removed by moving the grille through a 45 degree angle, away from the hood. The inlet grille can be removed while the door panel is in the open position, but the power must be turned off prior to doing this.

The charcoal filters should be located onto the mounting in the centre of the fan cover. In the recirculating mode, air passes through the grease and charcoal filters and out through the ducts located in the casing above the decor panel.

In the extraction mode, air passes through the grease filter and out through the ducting into the atmosphere.

To obtain the best performance it is advisable to switch on the hood a few minutes before commencing cooking and leave it running for approximately 15 minutes after finishing.

MAINTENANCE AND CLEANING

WARNING

Before carrying out any kind of maintenance or cleaning disconnect the hood from the mains supply.

Cleaning

The external surfaces of the hood should be cleaned regularly, using a lukewarm solution of water and mild detergent, then rinsed and dried carefully.

To obtain the best results from your cooker hood, regular maintenance and cleaning of the filter will ensure good performance and reliability, while extending the working life of the hood. Special attention should be taken to keep the grease filter clean at all times and the charcoal filter (recirculation model), should be replaced regularly.

Charcoal Filters

The charcoal filters cannot be cleaned and will need replacing at some point in time depending on usage. Their function is to absorb smells and odours when the hood is used in the recirculating mode.

Metal Grease Filter

The metal filter should be cleaned once a month after normal usage. It may be washed in hot water and mild detergent or liquid soap or it may be washed in a dishwasher. It should not be bent. Make sure the grease filter is dry before refitting.

WARNING:

It is a possible fire hazard if the filters are not cleaned and replaced as recommended. Replacement charcoal filters can be obtained from your local Zanussi Service Force Centre, whose details can be found in the directory in the back of this instruction book, or in your telephone directory under 'Z'.

IMPORTANT

Never leave frying pans unattended during use as overheated fats and oils may catch fire.

Never do flambe cooking under a cooker hood.

Worktop Illumination

If a lamp fails to function at any time, open the metal grille and check that the lamp is fully screwed into the holder.

When changing the lamp, an identical replacement must be fitted to ensure safe working of the hood.

Replacement lamps are tulip shaped, clear glass 240V 40W small Edison E14 screw thread.

SERVICING

If, having followed these instructions carefully, your machine fails to work properly, contact your local Zanussi Service Force Centre but before requesting service, the following simple checks may save you inconvenience and expense.

The cooker hood will not start...

Check that:

The hood is connected to the electricity supply.

The MOTOR switch and the light switch are on.

The cooker hood is not working efficiently...

Check that:

The motor speed control switch is on a setting fast enough for the task.

The grease filter is clean.

The kitchen is adequately ventilated to allow the entry of fresh air.

If set up for recirculation, check that the activated charcoal filter is still effective.

If set up for extraction, check that the ducting and outlets are not blocked.

In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

*** Please note that proof of purchase is required for any in-guarantee service calls.**

If the appliance is still not working, contact your local Zanussi Service Force Centre, whose address and telephone number can be found in the directory on the following pages of this instruction book, or in your local telephone directory under 'Z'.

How To Find The Telephone Number Of Your Zanussi Service Force.

Zanussi Service areas are allocated by postcodes which are listed in alphabetical order for easy reference.

1. Look for the first two letters of your address postcode in the far left 'Postcode' column.
2. Match up the number of your postcode against the number listed in the 'Postcode' numbers column.
3. Look across the column to the Service Force Key Number for your area. Turn to the last page of this directory for the address and telephone number to contact for service which is listed against your key number.

If you are unsure of your postcode, the main towns and cities are listed in alphabetical order for easy reference.

Additionally, your local Zanussi Service Force Centre telephone number is listed under 'Z' in your telephone directory.

The Customer Care Department at Zanussi House, Hambridge Road, Newbury, Berks, RG14 5EP, Tel: 0635 521313, will be happy to help you with any queries or difficulties.

Post-code Letter	Town	Post-code Number	Service Force Key Number	Post-code Letter	Town	Post-code Number	Service Force Key Number
AB	Aberdeen	1-5	1	DE	Derby	11-12	18
AL	St Albans	1-10	2	DG	Dumfries	1-7, 10-12	34
A	Brecon	45	3	DG		13-14	35
BA	Bath	1-5, 11-15	4	DG		8-9	36
BA		7-10, 20-22	5	DH	Durham	1-9	37
BA		6, 16	6	DL	Darlington	1-17	37
BB	Blackburn	1-12	7	DN	Doncaster	1-7, 10-12, 22	33
BD	Bradford	1-23	8	DN		14	38
BD		24	7	DN	Doncaster	8-9, 15-21, 31-40	39
BH	Bournemouth	1-18, 21-25	9				
BH		19-20	10	SUB POSTCODE DIVISION			
BL	Bury	0-9	11	DN	Gainsborough		
BN	Brighton	1-9, 11-15,	12		South	21-1, 21-2, 21-5	40
BN		20-27	12	DN	Gainsborough		
BN		16-18	13		North	21-3, 21-4	39
BR	Bromley	1-8	14				
BS	Bristol	1-28, 98-99	15	DT	Dorchester	1-6, 10-11	10
BT	Belfast	1-82	16	DT		6-9	5
B	Birmingham	1-21, 25-33,	17				
B		38, 40, 45, 47-48,	17	SUB POSTCODE DIVISION			
B		60-71, 80, 97-98	17	DT	Bridport East	6-3, 6-4	10
B	Birmingham	23-24, 34-37,	18	DT	Bridport West	6-5, 6-6	5
B		42-44, 46, 72-	18				
B		79	18	DY	Dudley	1-6, 8-9	17
B	Birmingham	49-50,	19	DY		7, 10-14	41
B		96	19	EC	London	All EC Codes	28
B	Birmingham	95	20	EH	Edinburgh	1-42, 52-54	42
CA	Carlisle	1-16, 18-28	21	EH		43-46	35
CA		17	7	EH	Edinburgh	47-49, 51, 55	43
CB	Cambridge	1-8	22	EN	Enfield	1-11	28
CB		9-11	23	EX	Exeter	1-17, 20	45
CF	Cardiff	1-8, 31-48	3	EX		18-23, 31-39	46
CH	Chester	1-4	24	E	London	All East Codes	28
CH		5-7	25	FK	Falkirk	1-4	43
CH		8	26	FK		10-14, 18-19	32
CM	Chelmsford	0-6, 8-9, 11-15	27	FK	Falkirk	5-9, 15-17	47
CM		7	23	FK		20-21	31
CM	Chelmsford	16-24	28	FY	Fleetwood	0-8	7
CO	Colchester	1-16	23	GCI	Guernsey		48
CR	Croyden	0, 2-4, 9	29	GL	Gloucester	1-8, 10-19,	49
CT	Canterbury	1-21	14	GL		50-56	49
CV	Coventry	1-8, 10-12, 21-23,	20	GL		9	15
CV		9, 13	18	GL		20	19
CV	Coventry	31-35, 37	20	GU	Guildford	1-24, 26, 34-35	50
CV		36	19	GU		25	51
CW	Crewe	1-12	30	GU	Guildford	27-33	13
DA	Dartford	1-18	14	G	Glasgow	1-5, 11-15, 20-23,	47
DD	Dundee	1-5, 7-11	31	G		31-34, 40-46, 51-	47
DD		6	32	G	Glasgow	53, 58, 60-69, 73,	47
DE	Derby	1-7, 13-15, 55	33	G		76-78, 81-84	47
				G	Glasgow	71-72, 74-75	43

Post-code Letter	Town	Postcode Number	Service Force Key Number	Post-code Letter	Town	Postcode Number	Service Force Key Number
HA	Harrow	0-9	52	L	Liverpool	1-49, 60-70	24
HD	Huddersfield	1-8	8	ME	Medway	1-20, 99	14
HG	Harrogate	1-5	8	MK	Milton Keynes	1-17, 19, 40-46	22
HP	Hemel	1-3	2	MK		18	65
HP	Hempstead	4-23	53	ML	Motherwell	1-12	43
HR	Hereford	1-2, 4, 6-9	49	M	Manchester	1-35, 60	11
HR		3, 5	54	NE	Newcastle -on-		
HU	Hull	1-20, 55	38		Tyne	1-49, 61-70, 88	66
HX	Halifax	1-7	8	NE		98-99	66
IG	Ilford	1-11	28	NE		71	35
IOM	Isle of Man		55	NG	Nottingham	1-23, 25	33
IP	Ipswich	1-15, 30-31	56	NG		24	40
IP		16-27	57	NG	Nottingham	31-34	64
IP	Ipswich	28-29, 32-33	22	NN	Northampton	1-7, 11-12	67
IV	Inverness	1-24, 26, 30-36,	58	NN		8-10, 14-18	22
IV		40-49, 51-56	58	NN	Northampton	13	65
IV	Inverness	25, 27-28	59	NP	Newport	1-9, 44	3
JCI	Jersey		60	NR	Norwich	1-35	57
KA	Kilmarnock	1-26, 28-30	43	NW	London	All NW Codes	52
KA		27	61	N	London	All N Codes	28
KT	Kingston-on-			OL	Oldham	1-12, 15-16	11
	Thames	1-23	51	OL		13-14	7
KT		24	50	OX	Oxford	1-17	65
KW	Wick	1-14	59	PA	Paisley	1-4	47
KW		15-17	62	PA		5-19	43
KY	Kirkcaldy	1-16	32	PA	Paisley	20-27, 33, 35, 40-	68
LA	Lancaster	1-23	7	PA		49	68
LD	Llandrindod	1-8	54	PA		28-31	69
LD		3	3	PA	Paisley	32, 34, 36-39, 61	70
LE	Leicester	1-5, 7-8, 11-14,	63	PA		62-78	68
LE		16-17	63	PA	Paisley	80-82, 88	71
LE	Leicester	6, 9-10	63	PA		83-87	72
LE		15	64	PE	Peterborough	1-15, 34, 38	64
LL	Llandudno	11-15	25	PE		16-19	22
LL		16-19	26	PE	Peterborough	20-25	40
LL	Llandudno	20-21, 23, 27, 31-	25	PE		30-33, 35-37	57
LL		32, 34-40, 42-47	25	PH	Perth	1-2, 8-9, 10-18	31
LL	Llandudno	22, 24-26, 28-30,	26	PH		3-7	32
LL		33-34, 41, 48-49,	26	PH	Perth	19-26, 30-44	58
LL		51-78	26	PL	Plymouth	1-21	73
LN	Lincoln	1-6, 8-10	40	PL		22-35	74
LN		7, 11-13	39	PO	Portsmouth	1-22	13
				PO		30-41	75
				PR	Preston	1-9	7
				RG	Reading	1-17, 26	53
				RG		21-25, 27	50
				RG	Reading	28	4
				RH	Redhill	1-3, 6-7, 9-20	12
				RH		4-5	50
				RH	Redhill	8	29
SUB POSTCODE DIVISION							
LN	Lincoln	3-4, 3-5	40				
LN		3-6	39				
LS	Leeds	1-29	8				
LU	Luton	1-6	2				
LU		7	22				

Post-code Letter	Town	Postcode Number	Service Force Key Number	Post-code Letter	Town	Postcode Number	Service Force Key Number
RM	Romford	1-5, 7, 10-18	27	TR	Truro	1-27	74
RM		6, 8-9	28	TS	Stockton-on-		
SA	Swansea	1-20, 31-32	3		Tees	1-29	37
SA		33-39, 41-44, 61-73	76	TW	Twickenham	1-20	51
SA	Swansea	40, 45-48	77	UB	Uxbridge	1-10	52
SE	London	All SE Codes	29	WA	Warrington	1-5, 8-9, 10-15	11
SG	Stevenage	1-9, 11, 15	2	WA		6-7	24
SG		10, 12-14	28	WA	Warrington	16	30
SG	Stevenage	16-19	22	WC	London	All WC Codes	52
SK	Stockport	1-3, 6-12	30	WD	Watford	1-2, 4-7	2
SK		4-5, 13-16	11	WD		3	53
SK	Stockport	17	33	WF	Wakefield	1-17	8
SL	Slough	1-10	53	WN	Wigan	1-5, 7	11
SM	Sutton	1-3, 7	51	WN		6, 8	24
SM		4-6	29	WR	Worcester	1-14	19
SN	Swindon	1-8, 11-16	65	WR		15	41
SN		9-10	4	WS	Walsall	1-15	18
SO	Southampton	1, 4, 41-43, 51	9	WV	Wolverhampton	1-4, 10-14	18
SO		2-3, 5, 21-24, 52	13	WV		5-9, 15-16	41
SO	Southampton	20	4	W	London	All West Codes	52
SP	Salisbury	1-5, 9-11	4	YO	York	1-3, 5, 7-8	8
SP		6	9	YO		4, 6, 11-18, 25	38
SP	Salisbury	7-8	10	YO	York	21-22	37
SR	Sunderland	1-7, 9	66	ZE	Lerwick	1,3	79
SR		8	37	ZE		2	80
SS	Southend-on-						
	Sea	0-9, 11-17, 99	27				
ST	Stoke-on-						
	Trent	1-18, 20-21	30				
ST		19	18				
SW	London	All SW Codes	52				
		Except 2, 9, 16					
SW	London	2, 9, 16	29				
SY	Shrewsbury	1-6, 9-17, 18-22	25				
SY		7, 17-19	54				
SY	Shrewsbury	8	41				
SY		23-25	77				
S	Sheffield	1-19, 30-31, 40-45,	33				
S		60-66, 74, 80-81	33				
S	Sheffield	70-73, 75	8				
TA	Taunton	1-11, 21-24	6				
TA		12-20	5				
TD	Selkirk	1-15	35				
TF	Telford	1-8, 10-13	41				
TF		9	30				
TN	Tonbridge	1-2, 4, 8-18, 23-30	14				
TN		3, 5-7, 19-22, 31-40	12				
TQ	Torquay	1-6, 9, 12-13	78				
TQ		7-8	73				
TQ		14	45				

Service Force Key Number	Service Force Address	Telephone Number	Service Force Key Number	Service Force Address	Telephone Number
1	60 Commerce Street, Aberdeen, AB2 1BP or Tel:	0224 583949 0224 582704	41	1 Underhill Street, Bridgnorth, Salop, WV16 4BB	0746 763322
2	Unit 4, Riverside Est, Coldharbour Ln, Harpenden	05827 461909	42	38 Buccleuch Street, Dalkeith, Midlothian, EH22	031 663 7758
3	3 Pentwyn Road, Blackwood, Gwent, Sth Wales	0495 223151	43	Block 2 Unit 5, Auchentraith Ind. Est. Rosendale Way, Blantyre	0698 828145
4	31 St Andrews Road, Bemerton, Salisbury, SP2	0722 336072	45	91 Exeter Road, Exmouth, Devon, EX8 1QD	0395 263531
5	31 East Street, Crewkerne, Somerset, TA18	0460 72740	46	3 Bear St, Barnstaple, North Devon, EX32	0271 71774
6	80 Killigrew Street, Falmouth, Cornwall, TR11	0984 31858	47	Unit E6C Anniesland Ind. Est. Netherton Rd, Glasgow, Scotland or Tel:	041 954 5304 041 954 5349
7	333 Rangleat Road, Walton Summit, Preston, PR5	0772 321200	48	Blencathra, Saumarez Lane, Castel, Guernsey	0481 56854
8	7 Crown Street, Leeds, Yorks, LS2	0532 460992	49	134 Eastgate Street, Gloucester, GL1 1QT	0452 422488
9	63 Curzon Road, Bournemouth, BH1 4PW	0202 303363	50	Unit 1 Redfields Ind. Pk, Church Crookham, Fleet	0252 851414
10	Poundbury Road, Dorchester, Dorset, DT1 2PJ	0305 264951	51	127 Walton Road, Molesey, Surrey, KT8 0DT	081 979 6366
11	Unit 41/42 Clarendon Ct, Winwick Quay, W'ton	0925 50822	52	27 Christchurch Ind. Est. Forward Drive, Harrow	081 427 4247
12	Sydney House, Queens Road, Haywards Heath	0444 417656	53	Reform Road, Maidenhead, Berkshire	0628 783711
13	266 Main Road, Southbourne, Emsworth, PO10 or Tel:	0243 374814 0243 371170	54	Merion House, High Street, Llandrindod Wells	0597 4842
14	Bridgewood Hse, 8 Laker Road, Rochester, ME1 or Tel:	0634 201441 0689 61444	55	Tromode Wks, Cronkbourne Vill, Douglas, I.O.M.	0624 76066
15	89 Stoke Croft Road, Bristol, Avon, BS1 3RD or Tel:	0272 246271 0272 246378	56	Unit 2b, Elton Park Business Centre, Hadleigh Rd, Ipswich, IP2 0DQ	0473 211713
16	Owenmore Hse, Kilwee Ind. Est., Upper Dunmurry Lane, Belfast	0232 301121	57	75 Grove Road, Norwich, NR1 3RL	0603 629653
17	66 Birch Rd East, Wyreley Rd Ind. Est, B'ham	021 327 1671	58	Unit 3B3, Smithton Ind. Est. Smithton, Inverness	0463 791822
18	Unit 3 Sterling Park, Claymore, Tamworth or Tel:	0827 289800 0827 289822	59	Main Street, Golspie, Sutherland, KW10 6RA	040 833517
19	22 Newton Road, Malvern, Worcester	0684 572915	60	P.O.Box 45, Queens Road, St Helier, Jersey	0534 67001
20	Unit 3, Bryant Road, Exhall, Coventry	0203 644277	61	Bruach, Blackwaterfoot, Isle of Arran	077 086 246
21	High Ehenside, Egremont, Cumbria, CA22	0946 820509	62	Hatson Ind. Estate, Kirkwall, Orkney	0856 5457
22	1 Wharf Road, Higham Ferrers, Northants	0933 317727	63	30a Scotland Road, Market Harborough, LE16	0858 33229
23	Unit 18, Fourth Ave, Bluebridge Ind. Est, Halstead, Essex	0787 473982	64	Pinfold Rd, Manning Rd Ind. Est. Bourne, Lincs	0778 422147
24	Unit 14, Dock Road, Birkenhead, L41 1JJ	051 639 1287	65	Unit E19, Telford Rd, Launton Ind. Est. Bicester	0869 248598
25	Plas Fynnon W/house, Middleton Rd, Oswestry	0691 652917	66	Unit C1, Bergen Ct, Tyne Tunnel Trad. Estate, North Shields, Tyne & Wear	091 2960166
26	Easy Launderette, Panton Hall, Denbigh, Clwyd	074 571 3272	67	53 Sandringham Road, Northampton, NN1 5NA	0604 37061
27	19 Sirdar Rd, Off Brook Rd, Rayleigh, Essex	0268 741171	68	96 Argyll Street, Dunoon, Argyll, PA23 7NE	0369 2147
28	284 Alma Road, Enfield, EN3	081 805 6825	69	43 Crosshill Avenue, Camelton, Argyll	0586 52008
29	194 Court Road, Eltham, London, SE9 4EN	081 859 3939	70	Strathblayne, Miller Road, Oban	0631 62690
30	Unit 8b, Alderflat Dr, Newstead Ind. Est. Stoke-on-Trent, ST4 8HX	0782 643814	71	2 Killweivagh, Gregory, Benbecula, Outer Hebrides	0870 2331
31	3-7 Blackness Street, Dundee, Scotland, DD1 or Tel: or Tel:	0382 642828 0382 455862 0382 826809	72	Churchouse, 16 James St, Stornaway, Isle of Lewis	0851 5555
32	33a Burnside, Auchtermuchty, Fife, Scotland	0337 28807	73	6 Embankment Ln, Embankment Rd, Plymouth	0752 222540
33	Unit 63, Storforth Ln Trad. Est. Chesterfield	0246 231790	74	80 Killigrew Street, Falmouth, Cornwall, TR11	0326 314600
34	93 Irish Street, Dumfries, Scotland	0387 69694	75	109-111 Hunnyhill, Newport, Isle of Wight	0983 523062
35	2-8 Wood Market, Kelso, Borders, TD5 7AX	0573 24411	76	Roch, Haverfordwest, Dyfed	0437 710366
36	27 Antrim Ave, Stranraer, Dumfries & Galloway	0776 3277	77	4 Market Street, Aberaeron, W. Wales, SA46	0545 570254
37	8 Cumbie Way, Aycliffe Ind. Est. Newton Aycliffe	0325 300606	78	250-252 Torquay Road, Preston, Paignton	0803 526222
38	Unit 1, Boulevard Unit Fact. Est. Hull, HU3 4AY	0482 223335	79	3-4 Carlton Place, Lerwick, Shetland, ZE1	0595 2915
39	Unit 2, Cromwell Road, Grimsby, DN31 2BN	0472 358760	80	Harlsdale, Symbister, Whalasaay, Shetland	08066 546
40	Unit 14 Stonefield Park, Clifton Street, Lincoln	0522 532330			

PEACE OF MIND FOR TWELVE MONTHS

Zanussi Standard Guarantee Conditions

This guarantee is in addition to your statutory and other legal rights which will not be excluded or in any way diminished by the return of this guarantee card.

We, Zanussi Ltd., undertake that if within twelve months of the date of the purchase this ZANUSSI appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- * The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- * The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- * The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- * The appliance is still in the possession of the original purchaser.

All service work under this guarantee must be undertaken by a Zanussi Service Force Centre. Any appliance or defective part replaced shall become our property.

Exclusions

This guarantee does not cover:

- * Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- * Costs incurred for calls to put right machines improperly installed or calls to machines outside the United Kingdom.
- * Appliances found to be in use within a commercial environment, plus those which are the subject of rental agreements.
- * Products of Zanussi manufacture which are NOT marketed by Zanussi Ltd.
- * EEC Countries - the standard guarantee is applicable but is subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken. The Zanussi company in the country concerned will be pleased to advise further. Sight of your purchase receipt will be required by them.

OR FIVE YEARS

Zanussi 5 Year Cover Conditions

For a once-only payment you can extend your Standard Guarantee, all the conditions and exclusions of which apply.

1. The issue of a cover does NOT by virtue of our having done so, nullify the exclusions.
2. The engineer will need to check the details of your Cover Certificate and will make a charge for his services if it is not presented to him at the time of his call.

3. The date of purchase, or the date of initial payment (deposit) of the appliance will be deemed the date of commencement of cover.

4. Covers issued are not refundable or transferable.

5. Change of address: Zanussi Cover Certificate is valid throughout the UK including the Isle of Man, Channel Islands, Northern Ireland and does not require amending. Advice in writing, quoting the 'Cover' Card number is necessary to enable correction of records.

