

FAVORIT 88070 i

Dishwasher

User information



Dear Customer,

Please read this user information carefully and keep it to refer to later. Please pass the user information on to any future owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning! Information that affects your personal safety.

Important! Information that prevents damage to the appliance.



Useful tips and hints



Environmental information



Your dishwasher is fitted with the new “PULSE WASH” dishwashing system. With this dishwashing system the motor speed and spray pressure are varied during the dishwashing cycle to achieve better cleaning of the dishes. It is for this reason that the noise level varies during the dishwashing cycle.

Contents

Operating Instructions	5
Safety	5
Diagram of appliance	6
Control panel	7
Switching on for the first time – setting the language	8
Display	9
Basic operation	10
An overview of the menus.....	10
Adjusting an option/setting.....	11
Prior to using for the first time	12
Setting the water softener.....	12
Adding special salt.....	14
Filling up with rinse aid.....	15
Setting the acoustic signal:.....	17
In daily use	18
Loading cutlery and dishes.....	18
Adjusting the height of the upper basket.....	22
Adding detergent.....	23
Using 3in1 detergents.....	24
Selecting the dishwashing cycle (Cycle Table).....	25
Starting a dishwashing cycle.....	26
Setting the delay start.....	27
Switching off the dishwasher.....	28
Care and cleaning	29
What to do if	30
Resetting the language.....	30
Remedying small malfunctions.....	30
If the dishwashing results are not satisfactory.....	32
Disposal	33
Technical data	34
Notes for Test Institutes	35

Installation and connection instructions	37
Safety information for the installation	37
Installing the dishwasher	38
Connecting the dishwasher	39
Electrical Connection.....	42
Warranty conditions	44
Service and Spare Parts	47

Operating Instructions



Safety

Prior to using for the first time

- Follow the "Instructions for installation and connection".

Correct use

- The dishwasher is only intended for washing domestic dishes.
- Additions or modifications to the dishwasher are not permitted.
- Use only special salt, detergent and rinse aid suitable for domestic dishwashers.
- Do not put any solvents in the dishwasher. This could cause an explosion.

Child safety

- Keep packaging away from children. There is a risk of suffocation.
- Children often do not recognise the hazards associated with electrical appliances. Don't allow children to use the dishwasher unsupervised.
- Make sure that children and pets don't climb into the dishwasher. Could endanger life!
- Dishwasher detergents can cause chemical burns to the eyes, mouth and throat. Could endanger life! Comply with the safety instructions of the dishwasher detergent manufacturer.
- The water in the dishwasher is not for drinking. Risk of chemical burns.

General safety

- Repairs to the dishwasher are only to be carried out by qualified service engineers.
- When the dishwasher is not being used, switch it off and shut off the water tap.
- Never unplug the appliance by pulling on the cable. Always pull the plug.
- Never sit or stand on the open door.
- If the dishwasher is located in a room where there may be a frost, remove the connection hose from the tap after each use of the dishwasher.

Diagram of appliance

Ceiling spray arm

Upper basket spray arm
and floor spray arm

Water hardness
dial

Dispenser
for special salt


Dispenser
for detergent

Dispenser
for rinse aid


Rating plate

Filters

Interior lighting

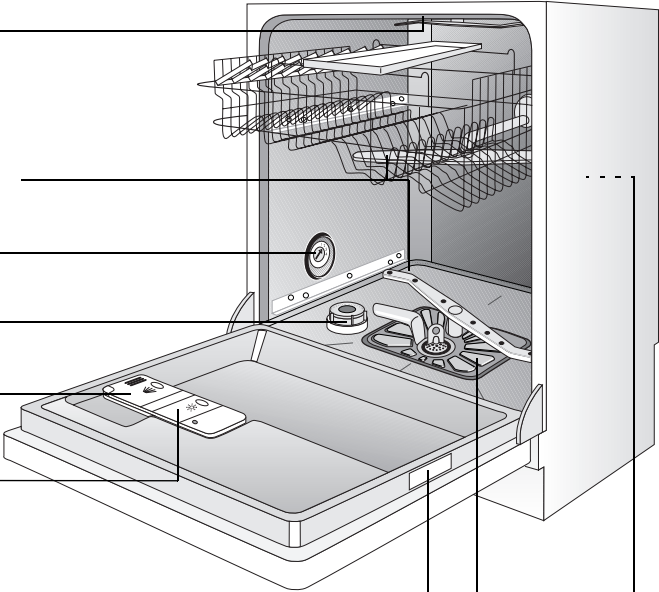

Control panel

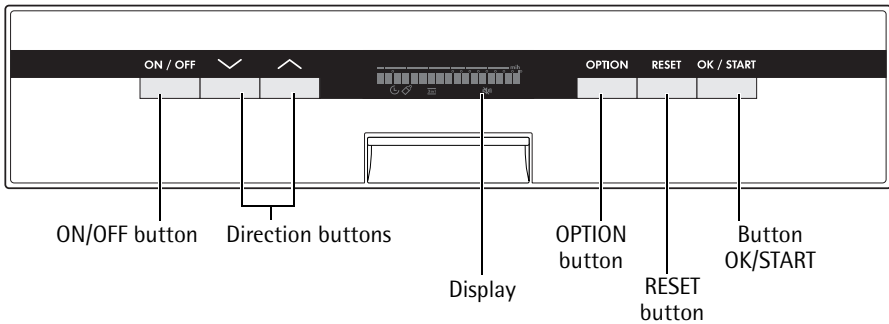

Button functions

ON/OFF	– Switching the appliance on and off
Direction buttons	– Selecting within the menu – Selecting a value when adjusting options or settings
OPTION	– Changing between Programmes menu and Options menu – while a dishwashing cycle is running: briefly changing the display's text line from displaying the cycle stage to displaying the dishwashing cycle
RESET	– cancelling the cycle that is running – with options and settings: cancelling the setting procedure – changing from Options menu to Programmes menu – changing from Settings sub-menu to Options menu
OK/START	– in the Programmes menu: starting a selected programme – changing from SETTINGS... (Options menu) to Settings sub-menu – in the Options menu: starting and finishing the setting procedure

Switching on for the first time – setting the language

1. Press the ON/OFF button.

First of all HELLO appears in the display.

As soon as the dishwasher is ready for use, this is replaced by LANGUAGE ENGLISH; the word ENGLISH is flashing.



LANGUAGE ENGLISH

2. Using the direction buttons (▲ or ▼) select the desired language.



LANGUAGE ENGLISH

3. Press the OK/START button.

This will have changed the display to the desired language. CHOOSE PROGRAMME is shown in the display.



CHOOSE PROGRAMME



If you want to change the language at a later time, please see the section "Resetting the language".



You can adjust the display lighting, by changing the settings BRIGHTNESS and CONTRAST; see section "Basic operation".

Display







The **info status bar** consists of a row of individual lamps that is divided into two sections: the left section refers to the Programmes menu, the right section to the Options menu.

- In the Programmes and Options menus you can see at what stage within a cycle you currently are (the relevant lamp flashes).
- While a dishwashing cycle is running, the info status bar functions as a programme progress display. You can then see at any time how many programme stages are still to take place (including the current programme stage).

The **text line** indicates in the Programmes menu the name of the programme selected and the estimated length of the cycle in minutes.

- In the Options menu the name of the selected option or setting is displayed and the current value set.
- While a dishwashing cycle is running, in the text line you can see the name of the current programme stage and the estimated time remaining for the whole dishwashing cycle.
Using the OPTION button you can briefly display the name of the dishwashing cycle.
- If there is a fault, a message is displayed.


The symbols in the **symbol line** have the following meanings:

	– Option DELAY START active
	– Programme with integrated disinfecting function selected
	– Option 3 IN 1 active
	– Loudspeaker is switched off; no acoustic signals (SOUND VOLUME setting)

Basic operation

This section contains basic information regarding the use of your dishwasher. Please read this section very carefully.

An overview of the menus

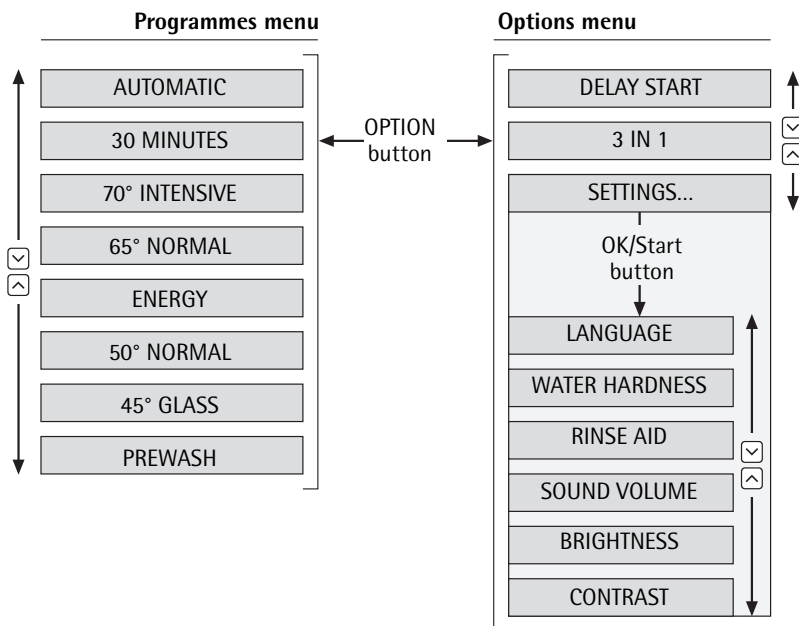

The Programmes menu

- After switching on the dishwasher you will find yourself in the Programmes menu.
- Select your dishwashing cycle here using the direction buttons (⏮ or ⏭). In the info status bar your position within the menu is always shown.
- Change to the Options menu using the OPTION button.

The Options menu

- Here go to the desired setting using the direction buttons (⏶ or ⏷). In the info status bar your position within the menu is always shown.
- For the option DELAY START see the section "Setting a delay start" for the option 3 IN 1 see the section "Before using for the first time"
- Use the OK/START button to switch from the menu item SETTINGS... to the Settings sub-menu.

The Settings sub-menu

Here go to the desired setting using the direction buttons (⏶ or ⏷). In the info status bar your position within the sub-menu is always shown.

• LANGUAGE

To set the language of the text line in the display; also see the section "Resetting the language".

• WATER HARDNESS

To set the value for water hardness electronically (value range 1 to 10).

• RINSE AID

To activate or deactivate the inflow of rinse aid.

• SOUND VOLUME

To set the sound volume of the acoustic signals (value range 0 to 5); at 0 the acoustic signals are switched off.

• BRIGHTNESS

To set the brightness of the display (value range 1 to 10).

• CONTRAST

To set the contrast of the display (value range 1 to 10).

Adjusting an option/setting

1. Go to the option or setting that you wish to adjust.
2. Press the OK/START button. The value that is currently set will flash.
3. Using the direction buttons (⏶ or ⏷) select the desired value.
4. Press the OK/START button. The newly set value is lit without flashing.
5. Using the direction buttons (⏶ or ⏷) you can select another option or setting.



A selected value is accepted using the OPTION button. In the display the first entry in either the Options or Settings menu is displayed.



You can abort the setting procedure using the RESET button.

Prior to using for the first time

1. Set the water softener
2. Fill up with special salt for water softeners
3. Fill up with rinse aid



- If you wish to use "3in1" detergent, please do the following:
- First read the section "Using 3in1 detergents".
 - Switch on the dishwasher, go to option 3 IN 1, change value to ON (see section " Adjusting an option/setting"); symbol **3in1** lights up in the symbol line. As a result
 - there is no need to fill up with special salt or rinse aid.
 - there is no need to set the water softener.
 - there is no need to activate/deactivate the rinse aid inflow.
 - Before the start of the dishwashing cycle put 3in1 detergent in the detergent dispenser.

Setting the water softener


The water softener must be set manually and electronically:



To avoid scale deposits on the dishes and in the dishwasher, the dishes must be washed with soft water, i.e. water with a low lime content. The water softener must be set according to the table to the water hardness in the area where you live. Your local water company will be able to give you information about the water hardness in your area. The dishwasher must be switched off.

Setting manually:

1. Open the dishwasher door.
2. Remove the lower basket from the dishwasher.
3. Turn water hardness dial on the left wall of the dishwasher interior to 0 or 1 (see table).

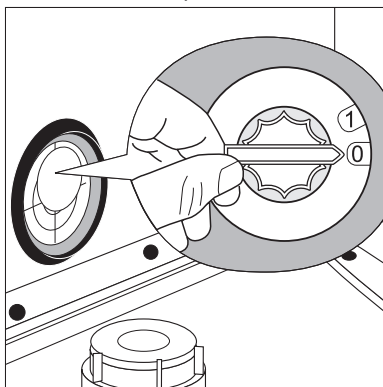

Setting electronically:

1. Press the ON/OFF button.



If the name of a programme stage is displayed in the display, a dishwashing cycle is active. First of all you must abort the dishwashing cycle:

- Press the RESET button. CONFIRM CANCEL? appears in the display.
- Press the OK/START button. This cancels the dishwashing cycle.

2. Go to the WATER HARDNESS setting; see section "Adapting an option/setting".

3. Set WATER HARDNESS to the right setting.

If the water softener is set electronically to "1" this switches off the display of the REFILL SALT message.

Water hardness			Adjusting the hardness setting	
in °d ¹⁾	in mmol/l ²⁾	Range	Manual	Electronic
51 - 70	9,0 - 12,5	IV	1	10 ³⁾
43 - 50	7,6 - 8,9			9
37 - 42	6,5 - 7,5			8
29 - 36	5,1 - 6,4			7
23 - 28	4,0 - 5,0			6
19 - 22	3,3 - 3,9	III	0*	5
15 - 18	2,6 - 3,2			4*
11 - 14	1,9 - 2,5	II		3
4 - 10	0,7 - 1,8	I/II		2
below 4	below 0.7	I		1

1) (°d) German degree, measure of the hardness of water

2) [mmol/l] millimol per litre, international unit for water hardness

3) On this setting the length of the dishwashing cycle may be slightly longer.

*) factory setting

Adding special salt

To decalcify the water softener, it must be filled up with special salt. Use only special salt suitable for domestic dishwashers.

If you do not use 3in1 detergent, fill up with special salt:

- Before using the dishwasher for the first time.
- If when starting a cycle the message REFILL SALT is displayed.

1. Open the door and remove the lower basket.


2. Screw open the lid on the salt dispenser by turning it anti-clockwise.

3. **Only when using the dishwasher for the first time:**

Fill the salt dispenser with water.

4. Place the funnel (supplied) over the dispenser opening.

Fill the dispenser with special salt; the capacity of the dispenser is approx. 1.0-1.5 kg, depending on the size of the grains. Do not overfill the dispenser.

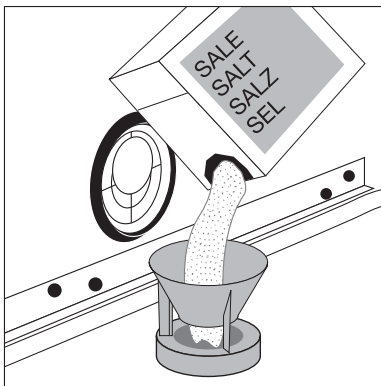

i If water overflows when filling up with special salt, this is completely harmless.

5. Clean away any salt remnants from the dispenser opening.

6. Screw the lid back on in a clockwise direction.

7. **Run a dishwashing cycle after filling the salt dispenser with special salt.** This will wash away salt water and salt crystals that have been spilt.

i Depending on the size of the grains, it can take several hours for the salt to dissolve in the water and for the message REFILL SALT not to be displayed when starting a dishwashing cycle.

Filling up with rinse aid



With rinse aid the rinsing water drains away better and so you get smear-free, gleaming dishes and clear glasses.

If you do not use 3in1 detergent, fill up with rinse aid:

- Before using the dishwasher for the first time.
- If when starting a dishwashing cycle the message REFILL RINSE AID is displayed.

Use only special rinse aid for dishwashers and no other liquid detergents.

1. Open the door.
The rinse aid compartment is located on the inside of the dishwasher door.
2. Press the release button on the rinse aid compartment.
3. Open the cover.
4. Pour rinse aid in slowly right up to the broken "max" line; this corresponds to a volume of approx. 140 ml when full.
5. Press the lid shut until it clicks into place.
6. Wipe up any spilt rinse aid with a cloth. Otherwise there will be too much foam when rinsing.

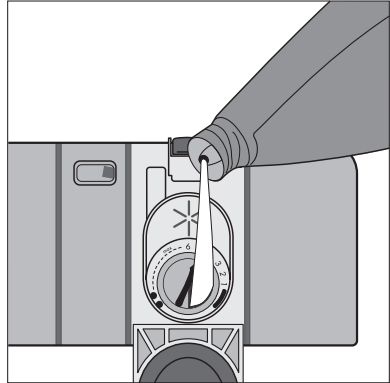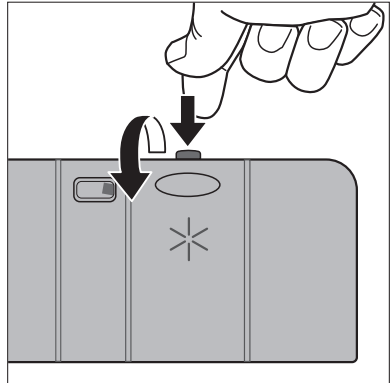


Setting the amount of rinse aid required



Only change the amount dispensed, if smears, milky spots (reduce the amount) or dried on water spots (increase the amount) can be seen on glasses and dishes. (See section "If dishwashing results are not satisfactory.") The dosage can be set from 1-6. The dosage is pre-set to "4" in the factory.

1. Open the dishwasher door.
2. Press the release button on the rinse aid compartment.
3. Open the cover.
4. Set the dosage level.
5. Press the lid shut until it clicks into place.
6. If rinse aid has leaked out, wipe it away with a cloth.

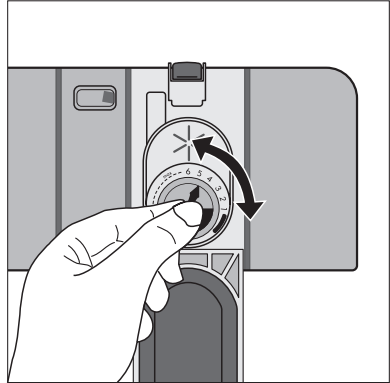

Activating/deactivating the inflow of rinse aid

When the 3 IN 1 option is activated, you do not need to deactivate the rinse aid inflow.

1. Press the ON/OFF button.



If the name of a programme stage is displayed in the display, a dishwashing cycle is active. First of all you must abort the dishwashing cycle:

- Press the RESET button. CONFIRM CANCEL? appears in the display.
 - Press the OK/START button. This cancels the dishwashing cycle.
2. Go to the RINSE AID setting; see the section "Adapting an option/setting".
 3. If required, set the right value.
If the value is ON, the rinse aid inflow is activated; if the value is OFF, it is deactivated.

Setting the acoustic signal:

In addition to the optical display (e.g. indicating the end of the cycle, errors) you can also choose to set an acoustic signal.

1. Press the ON/OFF button.




If the name of a programme stage is displayed in the display, a dishwashing cycle is active. First of all you must abort the dishwashing cycle:

- Press the RESET button. CONFIRM CANCEL? appears in the display.
- Press the OK/START button. This cancels the dishwashing cycle.

2. Go to the SOUND VOLUME setting; see the section "Adapting an option/setting".

3. Set the value for the sound volume.

You can set a value from 0 to 5. At 5 the acoustic signals are very loud, at 0 no acoustic signals are emitted; in addition the symbol  is lit in the display.

In daily use

Loading cutlery and dishes



Sponges, cleaning cloths and any other objects that can absorb water must not be washed in the dishwasher. Plastic and Teflon-coated dishes and pans tend to retain water droplets. These dishes and pans therefore do not dry as well as those made of china and stainless steel.

For washing in the dishwasher, the following cutlery/dishes/pots and pans	
are not suitable:	are of limited suitability:
<ul style="list-style-type: none">• Cutlery with wooden, horn, china or mother of pearl handles• Plastic items that are not heat resistant• Older cutlery with cement that is sensitive to temperature• Dishes or cutlery with glued parts• Pewter or copper items• Lead crystal glass• Steel items that rust• Wooden boards/platters• Items made from synthetic materials	<ul style="list-style-type: none">• Only wash stoneware in the dishwasher if it is specifically marked by the manufacturer as being dishwasher-safe.• Glazed patterns may fade if washed very frequently in the dishwasher.• Silver and aluminium parts have a tendency to discolour during washing. Food remains, e.g. egg white, egg yolk and mustard often cause discoloration and staining on silver. Therefore always clean food residues from silver immediately, if it is not to be washed straight after use.• Glass can become dull after a large number of washes.

- Before loading the dishes, you should:
 - Remove the worst of the food residues.
 - Soak pans with burnt-on food residues.
- When loading the dishes and cutlery, please note:
 - Dishes and cutlery must not impede the rotation of the spray arms.
 - Load bowls, cups, glasses, pans, etc. with the opening downwards so that water cannot collect in them
 - Dishes and items of cutlery must not lie inside one another or cover one another
 - To avoid damage to glasses, they must not touch one another
 - Don't put small items (e.g. lids) in the baskets for the dishes, but in the cutlery basket, so that they can't fall through the holes.


Loading cutlery



Warning: Sharp knives and other items of cutlery with sharp edges must be laid in the cutlery rack or in the upper basket because of the risk of injury.



Place knives, small spoons and small forks in the cutlery tray which is in the upper basket.

Place forks and spoons that do not fit in the cutlery tray in the cutlery basket.

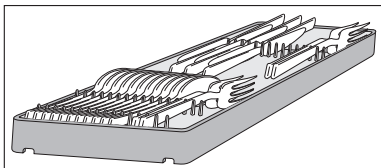

To ensure that all items of cutlery in the cutlery basket can be reached by the water, you should:

1. Place the grid insert on the cutlery basket
2. Place forks and spoons in the cutlery basket's grid insert with their handles pointing downwards.

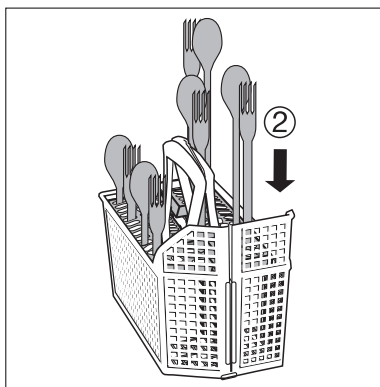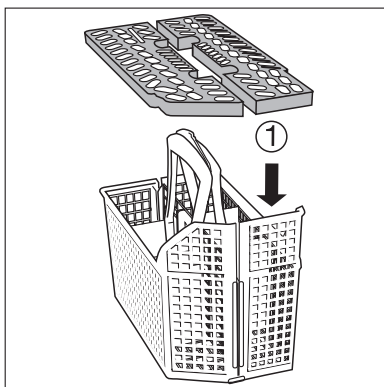


For larger utensils, such as whisks, leave off one half of the cutlery grid.

The cutlery basket can be opened out.


Always make sure that you put your hand around both parts of the two-part handle when removing it from the dishwasher.

1. Place the cutlery basket on a table or work surface.
2. Open out the two-part handle.
3. Remove cutlery.

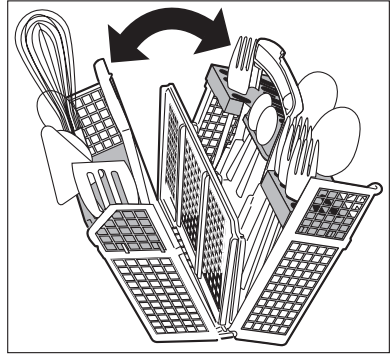


Pots, Pans, Large Plates

Load larger and heavily soiled dishes and pans in the lower basket. (Max. diameter for plates 29 cm).

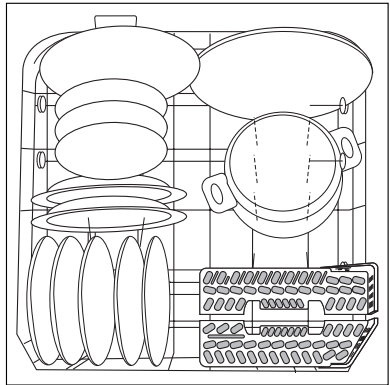


To make it easier to load larger dishes, all rear plate rests in the lower basket can be folded down.

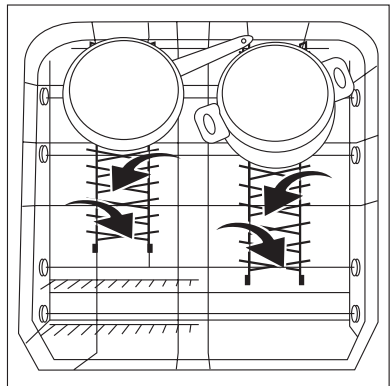


Cups, Glasses, Coffee Service

Load smaller, fragile crockery and long, sharp cutlery in the upper basket.


- Arrange items of crockery on and under the folding cup racks so that they are offset from each other and water can reach all items.

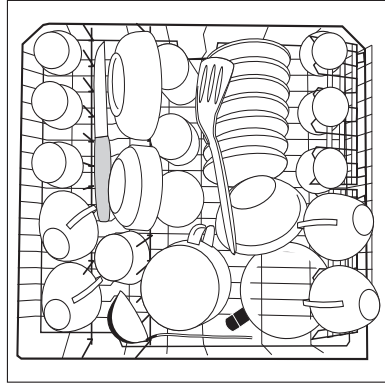


- The cup racks can be folded up out of the way for tall crockery items.
- Lay or hang wine and brandy glasses in the slots in the cup racks.

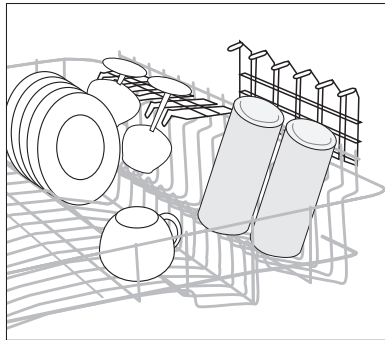

- For glasses with long stems, fold the glass rack to the right, otherwise fold it away to the left.

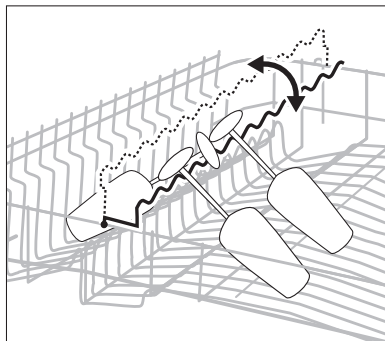

- The row of spikes on the left of the upper basket is also in two parts and can be folded away. Spikes not folded away: place glasses, mugs etc. in the upper basket. Spikes folded away: More room for serving dishes.

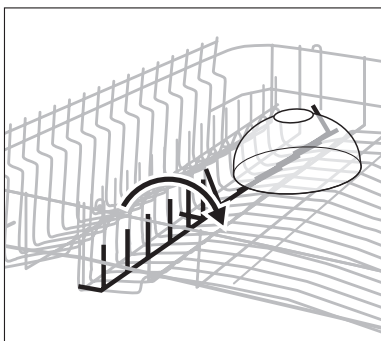

Adjusting the height of the upper basket


	Maximum height of dishes in the	
	Upper basket	Lower basket
with upper basket raised	22 cm	30 cm
with upper basket lowered	24 cm	29 cm



The height of the baskets can also be adjusted when they are loaded.

Raising/lowering the upper basket

1. Pull out the upper basket completely.
2. Raise the upper basket as far as it will go and then lower it vertically. The upper basket will latch into the lower or the upper position.

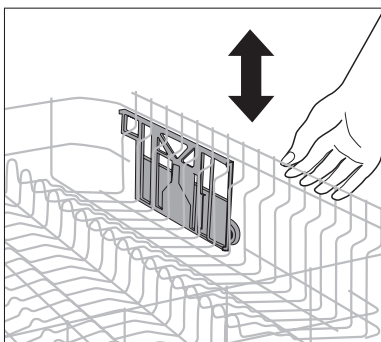

Adding detergent


Detergents remove the dirt from dishes and cutlery. The detergent must be added before the cycle starts.




Only use detergent intended for domestic dishwashers.

The detergent compartment is located on the inside of the door.

1. If the lid is closed:
Press the release button.
The lid will spring open.

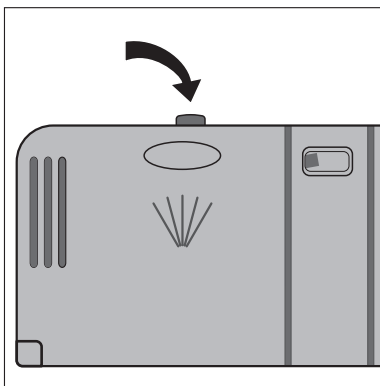

2. Place the detergent in the detergent dispenser. The markings indicate the dosing levels for powder detergents: "20/30" corresponds to approx. 20/30 ml of detergent. Follow the manufacturer's instructions with regard to dosing and storage.
3. Close the lid and press until it locks into place.

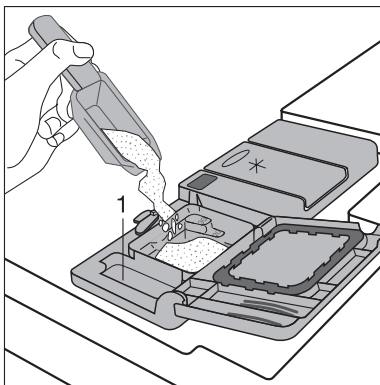

In the case of very heavily soiled dishes, fill the adjoining compartment (1) with additional detergent. This detergent comes into use during the pre-wash cycle.

Concentrated detergents

Today's detergents for dishwashers are almost exclusively low-alkaline concentrated detergents with natural enzymes in tablet or powder form.



Using 50°C dishwashing cycles in conjunction with these concentrated detergents reduces pollution and is good for your dishes, as these dishwashing cycles are specially matched to the dirt-dissolving properties of the enzymes in concentrated detergents. It is for this reason that using 50 °C dishwashing cycles in conjunction with concentrated detergents can achieve the same cleaning results that can otherwise only be achieved using 65 °C cycles.

Detergent tablets



Detergent tablets from different manufacturers dissolve at different rates. For this reason, some detergent tablets do not attain their full cleaning power during short cycles. Therefore please use dishwashing cycles with pre-wash when using detergent tablets.

Using 3in1 detergents

These products are detergents with a combined cleaning, rinsing and salt function.

1. Check whether these detergents are suitable for your water hardness. Follow the manufacturer's instructions.
2. Place detergent just in the detergent dispenser.



If you use 3 in1 detergent, it may come about because of the different quality standards in the detergent, that the dishes do not dry sufficiently.

If so, proceed as follows (see section "Adding rinse aid"):

- Fill up the dispenser (if this is empty) with rinse aid.
- Set rinse aid dosage to "2" mechanically.
- Activate rinse aid inflow.

If you want to stop using 3in1 products, please do the following:

- Fill up the dispensers for salt and rinse aid again.
- Switch the water softener to the highest setting and perform up to three normal cycles without loading any dishes.
- Then set the water softener to the water hardness in your area.

Selecting the dishwashing cycle (Cycle Table)

Dishwashing-cycle	Suitable for:	Type of soiling	Programme sequence					Consumption values ¹⁾		
			Pre-wash	Main wash	Rinse	Final rinse	Drying	Length (minutes)	Energy (kWh)	Water (litres)
AUTOMATIC (50-65) ²⁾	Dinner service and cookware	normally soiled, dried-on food remains	•	•	1 to 2x	•	•	90 - 110	1,0 - 1,5	13 - 25
30 MINUTES (60°) ³⁾	Dishes, excluding sauce-pans	just used, lightly to normally soiled	-	•	-	•	-	30	0,8	9
70° INTENSIVE ⁴⁾	Dinner service and cookware	heavily soiled, dried-on food remains, in particular protein and starch	•	•	2x	•	•	120 - 130	1,8 - 2,0	23 - 25
65° NORMAL	Dinner service and cookware	normally soiled dried-on food remains	•	•	•	•	•	90 - 100	1,2 - 1,4	18 - 20
ENERGY (50°) ⁵⁾	Dinner service and cookware, temperature-sensitive crockery	normally soiled	•	•	•	•	•	130 - 160	0,95 - 1,05	12 - 14
50° NORMAL	Dinner service and cookware	normally soiled	•	•	•	•	•	85 - 95	1,1 - 1,2	15 - 17
45° GLASS	Dessert dishes and coffee service, delicate glassware	lightly soiled	-	•	2x	•	•	73	0,9	15
PREWASH (cold) ⁶⁾	All types of dishes	Used dishes that are being stored in the dishwasher and are to be washed later.	•	-	-	-	-	12	0,1	4

- 1) The consumption values were obtained under standardised conditions. They depend on how full the baskets for the dishes are. Variations are therefore possible in practice.
- 2) When using this cycle the degree of water clouding determines the amount of soiling on the dishes. The length of the cycle and water and energy consumption can vary greatly – depending upon the load and how dirty the dishes are. Depending upon the soiling, the temperature of the water will be automatically adjusted to between 50°C and 65°C.

- 3) When using this cycle, only load the dishwasher half full.
- 4) During the final rinse, the temperature is increased to 68° for 10 minutes to disinfect e.g. babies' bottles.
- 5) Test programme for Test Institutes
- 6) This cycle does not need any detergent.

Starting a dishwashing cycle

1. Check that the spray arms can turn freely.
2. Turn the water tap on fully.
3. Close the door.
4. Press the ON/OFF button.
5. Using the direction buttons (⏶ or ⏷) select the desired cycle.

The name of the selected dishwashing cycle will flash. To the right of the name the estimated length of the programme is displayed.

6. Press the OK/START button.

The selected dishwashing cycle will start. In the text line in the display you can see the name of the current stage in the programme. Next to this you can see the estimated time remaining in minutes.

Using the OPTION button you can briefly display the name of the dishwashing cycle in the display.



A dishwashing cycle can only be started from the Programmes menu.



During the dishwashing cycle, the remaining time shown in the display may be adjusted according to the size of the load, degree of soiling, etc.

If the dishwashing cycle does not start:

If after pressing the OK/START button the cycle does not start and a message appears in the display, (REFILL RINSE AID, REFILL SALT or PLEASE CLOSE DOOR):

- Follow the instructions in the message.

After the problem has been remedied, the cycle starts automatically.



With the messages REFILL RINSE AID or REFILL SALT you can nevertheless start the cycle by pressing the OK/START button again.



While a dishwashing cycle is running, you cannot make changes to options or settings.

Interrupting or aborting a dishwashing cycle

Only interrupt a dishwashing cycle that is in progress if it is absolutely necessary.

Interrupting the dishwashing programme by opening the dishwasher door



Hot steam may escape when the door is opened. There is a risk of scalding.

1. Open the door carefully. The dishwashing cycle will stop, in the display: PLEASE CLOSE DOOR
2. Close the door. The cycle will continue.

Aborting the dishwashing cycle

1. Press the RESET button.
In the display: CONFIRM CANCEL ?
2. Press the OK/START button.
The programme is cancelled. In the display: CHOOSE PROGRAMME
3. If you want to start a new dishwashing cycle, check whether there is any detergent in the dispenser.





Turning off the dishwasher will only interrupt a selected dishwashing cycle, not cancel it. The cycle will recommence after turning the dishwasher back on again.

Setting the delay start



With the delay start you can delay the start of a dishwashing cycle for between 1 and 19 hours. First of all set the delay start and then the desired dishwashing cycle.

1. Go to the DELAY START option; see section "Adapting an option/setting".
2. Set the period by which you wish to delay the start in hours.
In the symbol line of the display .
3. Press the OPTION button, to change to the Programmes menu.
4. Select programme and start.

First of all the pre-set time delay until the start runs down. In the display you see the time remaining until the start of the dishwashing cycle. After the time delay until the start has elapsed, the dishwashing cycle starts automatically, the symbol  goes out.

Cancelling a delay start:

You can cancel a delay start that is counting down at any time.

1. Press the RESET button.

In the display: CONFIRM CANCEL ?

2. Press the OK/START button.

The delay start is cancelled. The dishwasher cycle that is set begins.

Switching off the dishwasher

Switch off the dishwasher if the messages PROGRAMME END and PLEASE SWITCH OFF are being displayed alternately.

With some dishwashing cycles, the drying fan continues to run even after the end of the cycle.

If the acoustic signal has been enabled, a continuous tone will sound for 15 seconds at the end of the dishwashing cycle.

1. Press the ON/OFF button. Display goes out.
2. Turn off the water tap.



Carefully open the door. Hot steam may escape.

Hot dishes are sensitive to knocks. Therefore leave the dishes to cool for about 15 minutes before removing them. You also get a better drying result.

Removing the dishes



It is normal for the inner door and the dispensers to be damp.

- Empty the lower basket first, then the upper basket. This way you avoid dripping water from the upper basket onto dishes in the lower basket.

Care and cleaning



Do not use furniture care products or aggressive cleaners.


- When necessary, clean the dishwasher's controls with a soft cloth and clean warm water.
- Occasionally check the internal dispensers, door seal and water inlet filter (if fitted) for dirt and clean them, if necessary.

Cleaning the filters




The filters must be regularly checked and cleaned. Dirty filters will spoil the wash results.


1. Open the door and remove the lower basket.
2. Turn the handle about $\frac{1}{4}$ of a turn anticlockwise (A) and remove the filter system (B).

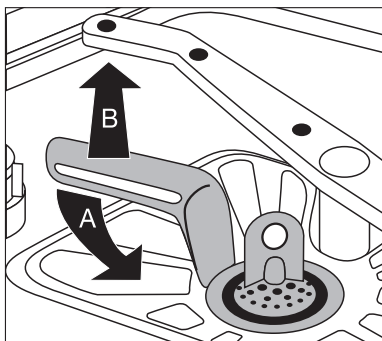

3. Take hold of the coarse and fine filters (1/2) by the handle and remove them from the micro-filter (3).
4. Clean all filters thoroughly under running water.
5. Remove the flat filter (4) from the base of the washing compartment and clean both surfaces thoroughly.
6. Re-insert the flat filter.

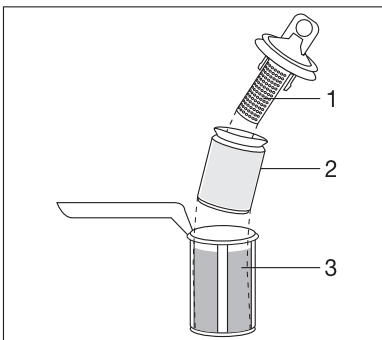

7. Place the coarse and fine filters in the micro-filter and press together.
8. Insert the filter system in place and lock it by turning the handle clockwise as far as it will go. Ensure that the flat filter does not protrude above the base of the washing compartment.

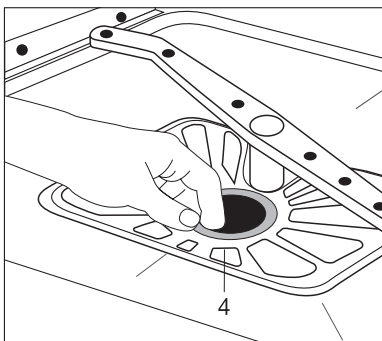



Under no circumstances may the dishwasher be used without its filters.

What to do if ...

Resetting the language

You can reset the language of the display to the factory setting at any time. As well as the language, the CONTRAST and BRIGHTNESS settings are also reset.

1. Press the RESET button repeatedly until the display in the display no longer changes.
2. Press and hold the RESET button for six seconds.
In the text line LANGUAGE ENGLISH appears. The word ENGLISH flashes.
3. Using the direction buttons  or  select the desired language.
4. Press the OK/START button.
5. If required, adjust the values for CONTRAST to BRIGHTNESS; see the section "Basic operation".

Remedying small malfunctions

If one of the following fault messages is displayed in the display during operation:

- OPEN THE TAP
- DRAIN BLOCKED

Remedy the fault, then re-start the dishwashing cycle. The cycle will continue.

In the case of other fault messages:

- Cancel the dishwashing cycle.
- Switch the appliance off and on again.
- Select dishwashing cycle.
- Press the OK/START button.

If the fault is displayed again, please contact the Customer Care Department and inform them of the fault message.

Malfunction	Possible cause	Remedy
1 short warning tone , continuously repeated, can be heard, in the display: OPEN THE TAP	Water tap is blocked with limescale or faulty.	Check the water tap and have it repaired if necessary.
	The tap is turned off.	Turn the tap on.
	The filter (where present) in the threaded hose fitting on the tap is blocked.	Clean the filter in the threaded hose fitting.
	Filters in the base of the washing compartment are blocked.	Press the button for the dishwashing cycle that has started; then abort the dishwashing cycle (see section: Starting a dishwashing cycle); clean filters (see section: Cleaning the filters).
	Water inflow hose has not been correctly positioned.	Check the position of the hose.
2 short warning tones , continuously repeated, can be heard, in the display: DRAIN BLOCKED (There is water in the dishwasher's internal dispenser)	The sink outlet is blocked.	Clean out sink outlet.
	Water drain hose has not been correctly positioned.	Check the position of the hose.
3 short warning tones , continuously repeated, can be heard, in the display: SERVICE CODE	The anti-flood system has been triggered.	First shut off the water tap, then switch off the appliance and contact the Customer Care Department.
1 long warning tone can be heard, in the display: SPRAY- ARM BLOCKED	The top basket spray arm is blocked.	Open the door carefully . Hot steam may escape when the door is opened. There is a risk of scalding. Arrange the dishes and cutlery in the baskets so that the spray arm above can rotate freely. Close the dishwasher door.
In the display: PLEASE CLOSE DOOR	The door of the dishwasher is open.	Close the dishwasher door.

Malfunction	Possible cause	Remedy
The cycle is not starting.	The mains plug is not plugged in.	Plug in mains plug.
	A fuse in the house's wiring system is defective.	Replace fuse.
	For dishwasher models with a delay start timer: A start time has been selected.	If the dishes are to be washed immediately, cancel the delay start.
Rust spots are visible in the dishwashing compartment.	The dishwashing compartment is made from rust-free stainless steel. Rust spots in the washing compartment are due to rust particles from external sources (rust particles from water pipes, pans, cutlery, etc.). Remove such spots with a commercially-available cleaning product for stainless steel.	Only wash cutlery, dishes and pans that are suitable for dishwasher use.
A whistling noise can be heard when washing dishes.	The whistling is not a cause for concern.	Use a different brand of detergent.
The dishwasher interior light does not come on.	The mains plug is not plugged in.	Plug in mains plug.
	The bulb in the interior light is faulty.	Contact the Customer Care Department.

If the dishwashing results are not satisfactory

The dishes are still dirty.

- The wrong dishwashing cycle was selected.
- The dishes were loaded in such a way that the dishwashing water did not reach all items. The baskets for the dishes must not be overloaded.
- The filters in the base of the washing compartment are dirty or incorrectly positioned.
- Good quality detergent was not used, or too little was used.
- In the case of scale deposits on the dishes: The special salt dispenser is empty or the water softening system has been incorrectly set.
- The drain hose is incorrectly positioned.

The dishes do not dry and are not shining.

- Poor quality rinse aid was used.
- The rinse aid dispenser is empty.

There are smears, streaks, milky spots or a shiny bluish coating on glasses and dishes.

- Lower rinse aid dosage.

There are dried water drops on the glasses and dishes.

- Increase rinse aid dosage.
- The detergent may be the cause. Contact the detergent manufacturer's customer advice centre.

Glass corrosion

- Contact the detergent manufacturer's customer advice centre.

Disposal



Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at your local waste disposal facilities.



Old appliance

Please dispose of your old appliance in line with the guidelines for disposal in your area.



Warning! When your appliance has finished its working life, remove the plug from the socket. Cut off the cable and plug and dispose of them.

Break the door lock so that the door no longer shuts. This prevents children from trapping themselves inside and endangering their lives.

Technical data

Capacity:	12 place settings including serving dishes
Permitted water pressure:	1-10 bar (=10-100 N/cm ² = 0.1-1.0 MPa)
Electrical connection:	230 V, 10 A, also see the rating plate on the right-hand side of the dishwasher's interior door .
Dishwashers that can be integrated and built-in	
Dimensions:	820 - 880 x 596 x 570 (H x W x D in mm)
Max. weight:	50 kg



This appliance conforms with the following EU Directives:

- 73/23/EEC dated 19.02.1973 Low Voltage Directive
- 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
- 93/68/EEC dated 22.07.1993 CE Marking Directive

Notes for Test Institutes


Testing in accordance with EN 60704 must be carried out with the appliance fully loaded and using the test cycle (see "Cycle Table").

Tests in accordance with EN 50242 must be carried out when the salt dispenser in the water softener and the rinse aid dispenser have been filled with salt and rinse aid respectively, and using the test cycle (see "Cycle Table").


	Full load: 12 place settings including serving dishes	Half load: 6 place settings including serving dishes, leaving alternate positions in the rack free
Amount of detergent required:	5g + 25g (Type B)	20g (Type B)
Rinse aid setting:	4 (Type III)	4 (Type III)

Sample loading arrangements:

Upper basket without cutlery tray *)

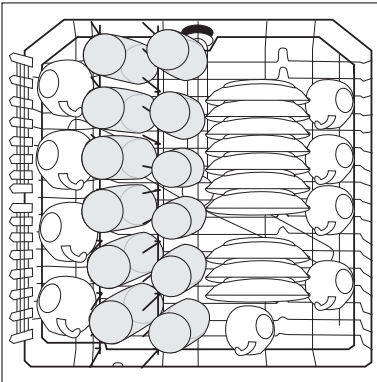


Upper basket with cutlery tray *)

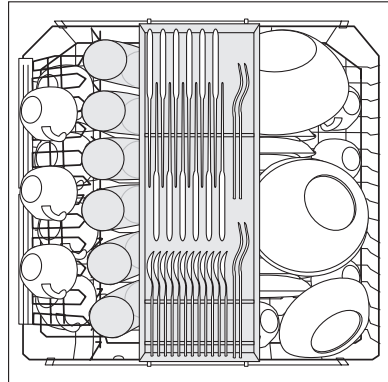


* If necessary, move the cup rack from right to left. When doing this, ensure that the cup rack is at the same height.

Lower basket with cutlery basket

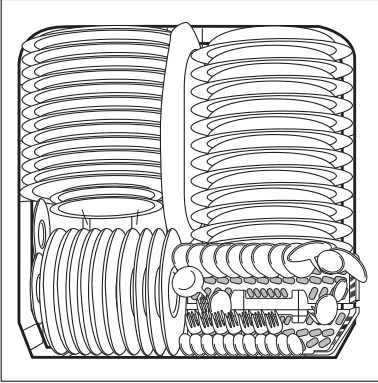

Cutlery basket

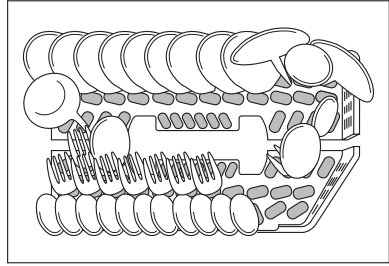

Installation and connection instructions




Safety information for the installation

- Only transport the dishwasher in an upright position, otherwise salt water may run out.
- Before using the dishwasher for the first time, check for any damage caused in transport. Do not under any circumstances connect an appliance that is damaged. In the case of damage, please contact your supplier.
- Never use the dishwasher if the mains cable, water inlet or drain hose are damaged; or if the control panel, work top or plinth area are damaged such that the inside of the appliance is freely accessible.
- Always plug the mains plug into a correctly installed shockproof socket.
- Permanent connection: a permanent connection must only be installed by a trained electrician.
- Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed. The fuse rating is also to be found on the rating plate.
- Multi-way plugs / connectors and extension cables must not be used. This could constitute a fire hazard through overheating.
- The dishwasher's cable must only be replaced by the Customer Care Department or a registered electrician.
- A water inlet hose with safety valve must only be replaced by the Customer Care Department.

Installing the dishwasher

- The dishwasher must be installed on a firm floor and adjusted to ensure that it is stable and level in all directions.
- To compensate for unevenness in the floor and to match the height of the appliance to that of surrounding units, extend the threaded feet using a screwdriver.
- Adjust the rear feet of the appliance using a cordless screwdriver from the front of the appliance. (See installation instructions.)
- The drain hose, inlet hose and mains cable must be laid so that they are able to move freely within the plinth area, and so that they are not kinked or crushed when the dishwasher is in position.
- The dishwasher must also be screwed tightly to the work surface or to the adjoining units. This is essential to ensure the dishwasher does not tip up.

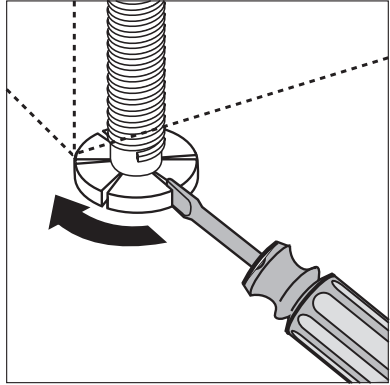

Dishwashers that can be integrated

(see installation template supplied)



The door of the appliance can be fitted with a wooden door/cupboard door with the following dimensions:

Width:	591 – 594 mm	
Depth:	16 – 24 mm	
Height: (variable)	dependent on	– Recess height – Plinth height – Adjusting the dishwasher to match the height of adjoining units The exact height must be measured at the place of installation from the adjoining units.
Weight:	max. 8 kg	

Connecting the dishwasher

Connecting to the water supply

- The dishwasher can be connected to cold and hot water supplies up to max. 60°C.
- The dishwasher must not be connected to open hot water appliances or instantaneous water heaters.

Permitted water pressure

Lowest permitted water pressure: 1 bar (=10 N/cm ² =100 kPa)	Consult your plumber if the water pressure is less than 1 bar.
Highest permitted water pressure: 10 bar (=100 N/cm ² =1 MPa)	If the water pressure is greater than 10 bar, a pressure reduction valve must be used (available from your dealer).

Connecting the inlet hose



The water inlet hose must not be kinked, crushed or entangled when it is being connected.

Connect the threaded hose fitting (ISO 228-1:2000) on the water inlet hose to a tap with an external thread (¾ inch). The inlet hose is fitted with either a plastic or a metal nut:

- **Only** tighten the **plastic** nut **hand tight**.
- You must tighten the **metal** nut **using a tool**.

Then do a visual check for water tightness (make sure that the tap is not dripping).



- So that access to the tap in the kitchen is not restricted by the use of the dishwasher, we recommend installing an additional tap, or fitting a T-branch to the existing tap.

If you need a longer water inlet hose than that supplied, the following VDE-approved complete hose sets are to be used. These are available from your local dealer.

- Hose kit "WRflex 100" (Code: 911 239 034)
- Hose kit "WRflex 200" (Code: 911 239 035)

Water drainage

Drain hose




The drain hose must not be kinked, crushed or entangled.

Connecting the drain hose:

- Maximum permitted height: 1 metre.
- Minimum required height: 40 cm above the bottom edge of the appliance.

Extension hoses

- Extension hoses are available from your dealer or from our Customer Care Department. To ensure that the function of the appliance is not impeded, the internal diameter of extension hoses must be 19 mm.
- Extension hoses must not be laid more than a maximum distance of 3 metres horizontally; the maximum permitted height for the connection for the drain hose is then 85 cm.

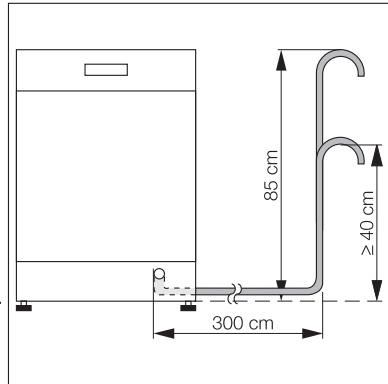

Sink outlet connection

- The outlet of the drain hose (\varnothing 19 mm) fits all commonly available sink outlet types. The outer diameter of the sink outlet connection must be at least 15 mm.
- The drain hose must be fixed to the sink outlet connection using the hose clamp supplied.

Water drainage if the dishwasher is built-in at high level

If the dishwasher is installed at a high level, and the drain hose connection is less than 30 cm from the lower edge of the appliance, adapter kit ET 111099520 must be fitted by the Customer Care Department.

Anti-flood system

For protection from water damage, the dishwasher is equipped with an anti-flood system.

In the event of a fault, the safety valve in the water inlet hose immediately interrupts the supply of water to the appliance and the drain pump is activated. In this way water can neither escape nor overflow.

The remaining water in the appliance is automatically pumped out.

Should a fault occur when the appliance is switched on, a buzzing tone can also be heard.

Electrical Connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



WARNING – This appliance must be earthed.

The manufacturer declines any responsibility should these safety measures not be observed.

Before switching on make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

To isolate the dishwasher from the mains, remove the mains plug.

Important: The plug must still be accessible after the appliance has been installed.


Changing a fuse

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS 1363A) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires on the mains lead are coloured in accordance with the following code.

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

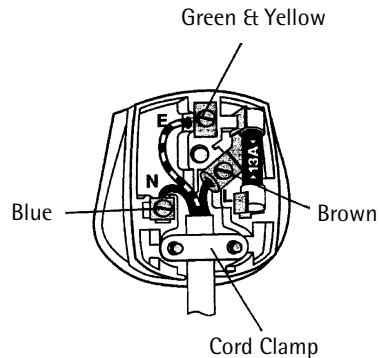


- The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol \oplus or coloured green and yellow.
- The wire coloured blue must be connected to the terminal "N" or coloured black.
- The wire coloured brown must be connected to the terminal marked "L" or coloured red.
- Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.



WARNING! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that, if it is necessary to cut off the plug, it is disposed of safely and not retained.

Connecting systems

The water inlet hose, drain hose and the mains cable must all be connected to the side of the dishwasher as there is no space for them behind the appliance.

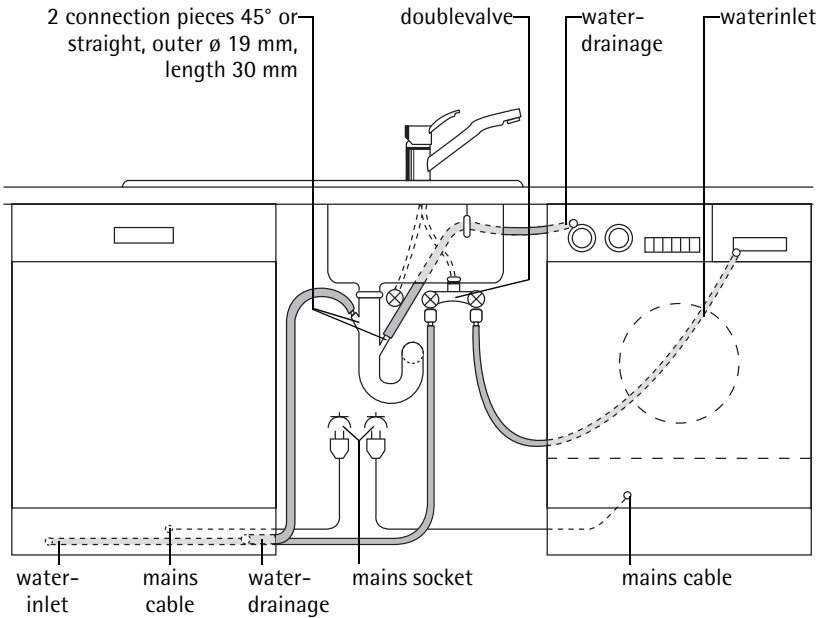

Warranty conditions

Great Britain

Standard guarantee conditions

We, AEG, undertake that if within 12 months of the date of the purchase this AEG appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our discretion repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity or gas supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.
- Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of AEG manufacture which are not marketed by AEG.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Slough	+44 (0) 1753 219899

Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

0870 5 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading „What to do if...“

When you contact the Service Force Centre you will need to give the following details:


1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

Customer Care

For general enquiries concerning your AEG appliance, or for further information on AEG products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **www.aeg.co.uk**.

Customer Care Department
AEG Domestic Appliances
55-77 High Street
Slough
Berkshire, SL1 1DZ
Tel: 08705 350350 (*)

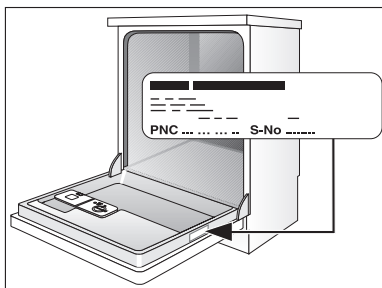

(*) Calls may be recorded for training purposes

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 961 335-00-180204-01

Subject to change without notice